



TABLE OF CONTENTS

Compile P.01

Panels	01	Low Profile Shelves	18
Quick Connect Clips	02	Overhead Storage Bins	19
Lock Clips	02	ADA Overhead	20
Panel Trims	02	Mid Run Panel Removal & Top Horizontal Replacement	20
Gallery Panel Connectors	03	Tackboards	21
Sliding Door	04	Load Bar	21
Integrated Privacy Glass	07	Core Replacement	22
CAPAS Privacy Glass	08	Chicago J-Box	22
Post Base Covers	09	Module replacement	23
Electrical	09	End Panel	24
Power Distribution Harness	10	Accessory Retainer	25
Installing Through Corners	10	Freestanding Flat Leg	26
Reversible Floor Power Entry	11		
Duplex Receptacle	11	Required Tools	
Ceiling Feed	12	Safety Glasses	
Post Extension	12	Wrench	
Raceway Covers without Knockouts	13	Allen Key	
Raceway Covers with Knockouts	13	Flathead Screwdriver	
Raceway Knockout Covers	13	Phillips Screwdriver	
Cantilevers Corner Brackets	14	Measuring Tape	
Mid Span Support Bracket	14		
Worksurface Mounting Option	14		
CHMEG Metal End Gable	15		
Pedestal Brackets	16		
Centre Mounted Overhead	17		

Panels


PANELS come from the factory with the “Quick Connect” clips pre-installed on both sides of the panels. One side is pointing up and the other side is pointing down.

UNIVERSAL CORNER POSTS come from the factory with the “Quick Connect” clips pre-installed on 3 sides. One side is pointing down, and 2 adjacent sides are pointing up. Corner Posts include an arrow indicating post direction for installation

Slide connections together, and press firmly in place. **Do not use hammer to try to secure panels.**

Leveling Tip:
• If panels don't line up exactly, please lower the glide on the

- lower panel to level the panels.
- Corner Post Tips:
- **Align the “Quick Connect” clips on the first panel of a run so both sides point UP indicated by the arrow.** This will allow the Corner Post to be dropped onto one side, and the adjacent panels to also be dropped on. Then the rest of the panels in the run can be easily dropped onto each other.
 - For 2 ways, remove one set of clips by loosening the set screw, and slide up and out, through the channel. Snap in 2 Post Trim Strips to finish 2 open sides.
 - For 3-ways, snap in Post Trim Strip to finish 4th side.
 - For 4-ways, install the clips on the 4th side facing up, so the panel can be dropped on.

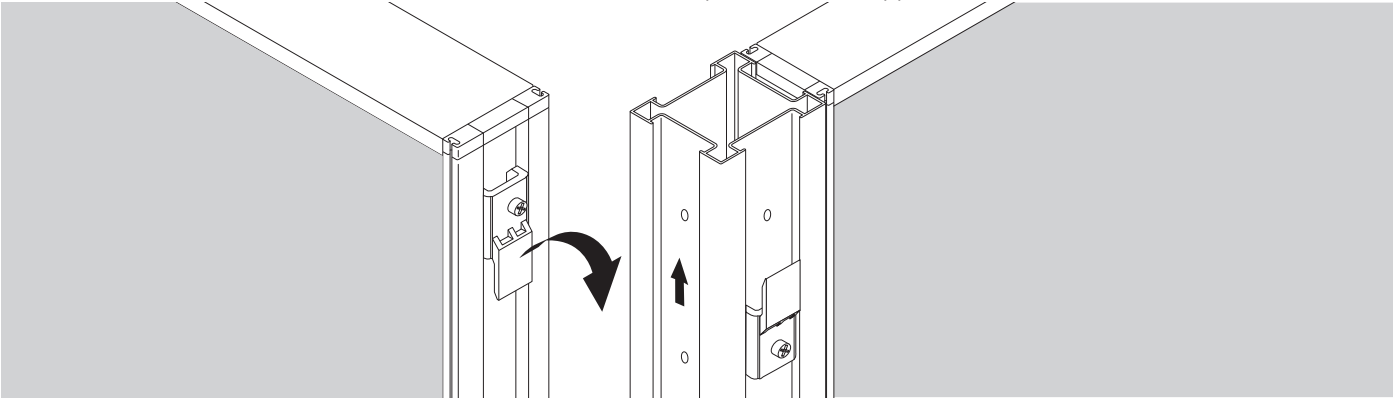

Please contact your Evolve Service Representative at 856.552.4000 for any questions or concerns.

NOTE: Any alterations to listed components will void the manufacturer's warranty. The manufacturer will not be responsible for any damage or bodily harm caused

by alterations in accordance with national or local electrical codes and manufacturer's specifications. In accordance with the manufacturer's policy of continual product improvement, the product presented in this document is subject to change without notice or obligation.

INSTALLATION GUIDELINES


Quick Connect Clips

Add or remove "Quick Connect" clips with a Phillips screwdriver, by loosening the screw enough to allow the clip to slide freely.

To remove clip, lift tab on top of panel and slide clips out of groove.

To change clip orientation, use the following hole configurations.

- Top hole to have clip point down.
- Bottom hole to have clip point up.

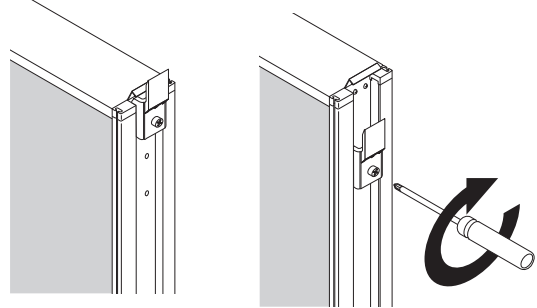

Lock Clips

Post: (a)




Put the lock clip in such a way that the short end of the clip is over the top connector and the longer side is facing the panel (even if it's on an angle). Using a mallet and a flat screwdriver, hammer the lock clip down until you feel it catch the lower screw.

Between Panels: (b)

Put the lock clip in such a way that the short end of the clip is over the top connector and the longer side is facing the panel. Using a mallet and a flat screwdriver, hammer the lock clip down until you feel it catch the lower screw.

Releasing the lock clip:


Pull the leveler (adjuster) down at the panel that its connector is on top and push the other panel down.

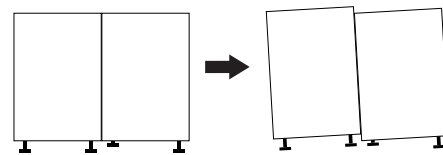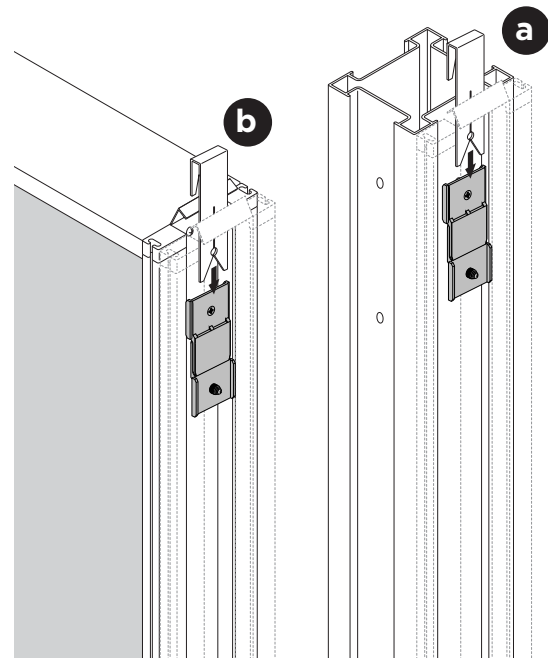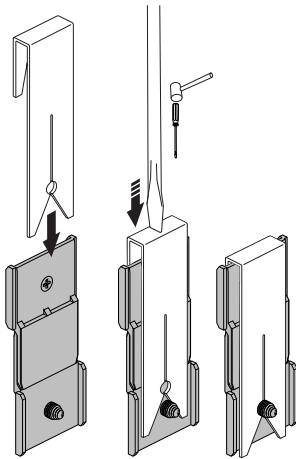

Panel Trims

Panel / Post Trims snap into place, to finish panel End of Runs, 2-way, 3-way and step down-variable height connections.

NOTE: End of Run Trims are approximately 5" longer than Post Trims.

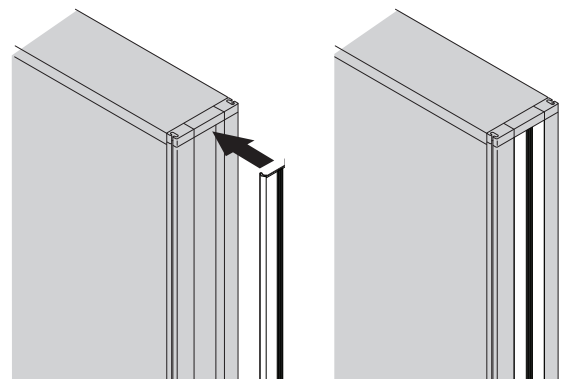

INSTALLATION GUIDELINES

Gallery Panel Connectors


NOTE A: The connectors on opposite sides of the panel should always face the opposite direction, one facing up the other facing down. This should continue in line with the connectors on the connected panels.

If required to flip the connector proceed with the following steps.

STEP 1: Remove the connector.

STEP 2: Rotate the connector 180 degrees. Align the connectors with the second set of predrilled holes.

STEP 3: Reattach the connector with the screws. Continue with the other connectors on the panel as needed.

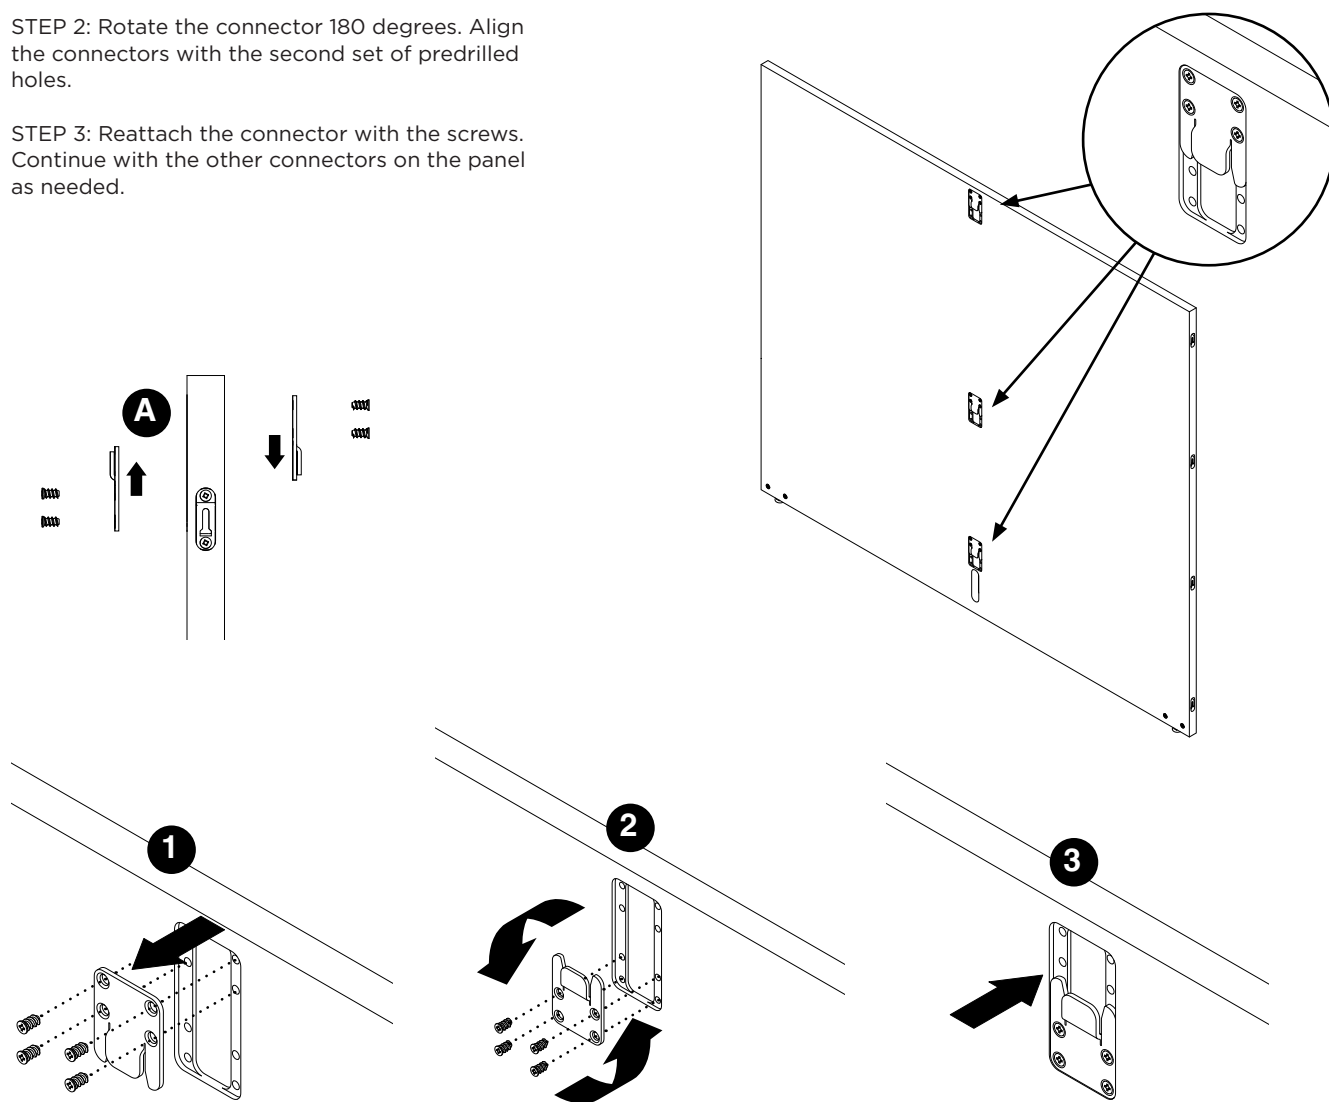

INSTALLATION GUIDELINES

Sliding Door Installation Guide • BPDSL

STEP 1: Insert the sliders and leave them at the panel's lowest point (bottom).

*Note the correct slider orientation



STEP 2: Add the screws and do not tighten yet, leave them loose.

STEP 3: Insert the remaining two sliders at the top.

*Note the correct slider orientation.

STEP 4: While tightening with the provided screws, Push the slider all the way up as seen in the illustration:

Note the correct
slider orientation

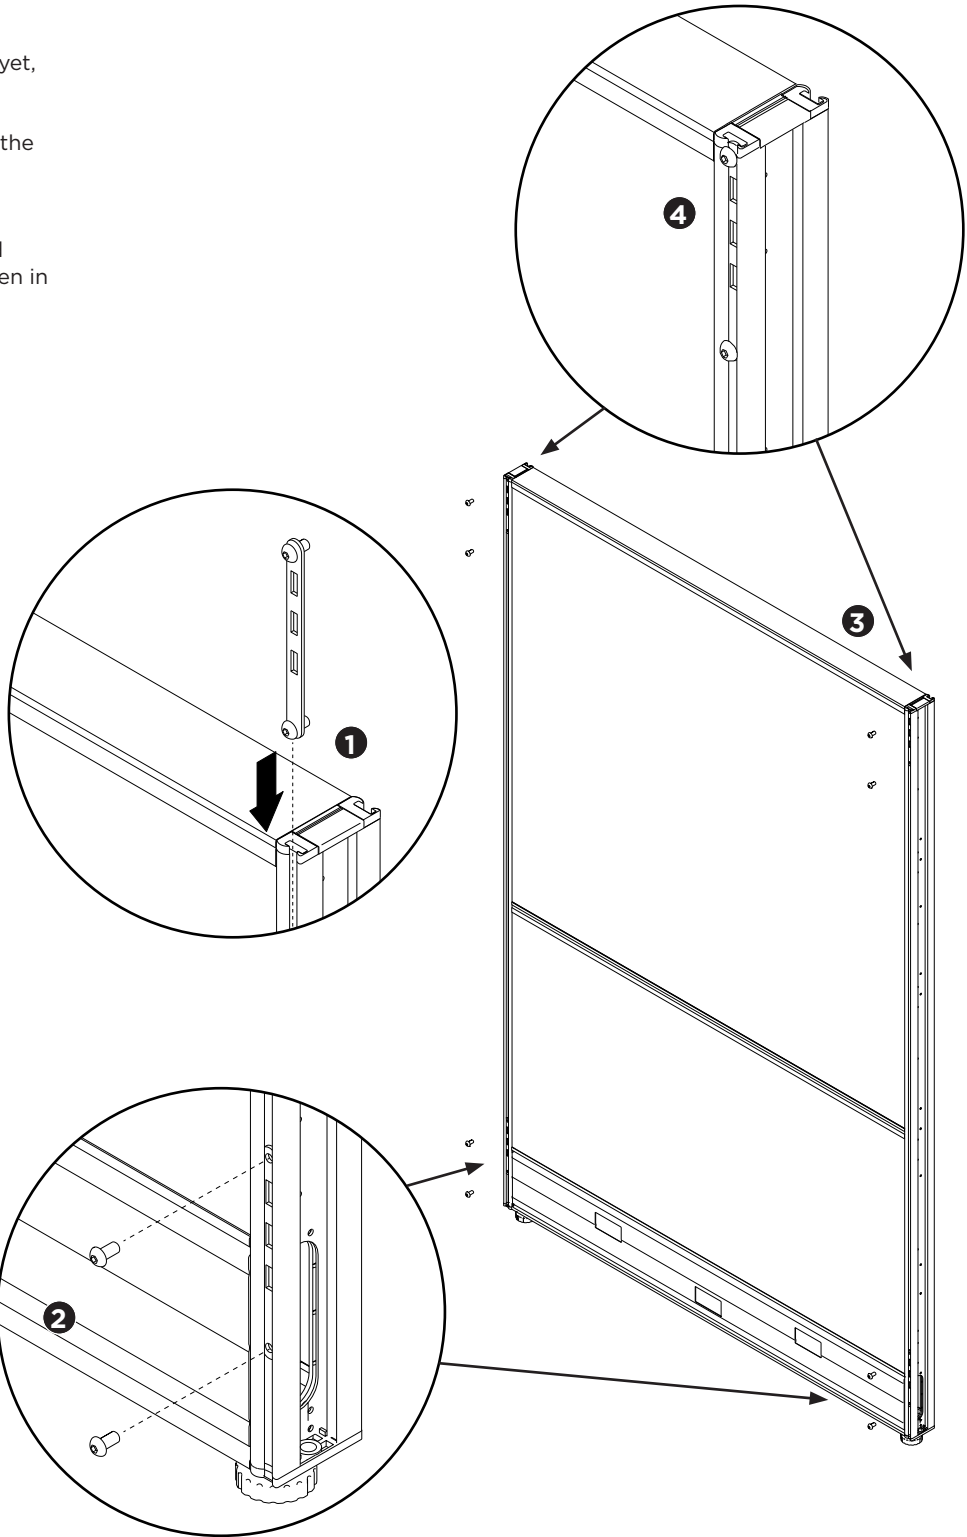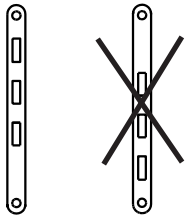

INSTALLATION GUIDELINES

Sliding Door Installation Guide • BPDSL



STEP 5: Hook the door's top brackets on the sliders (top first, then bottom brackets last).

Move the bottom sliders up/down to line up with the door's bottom brackets.

Once positioned properly, tighten them and hook the door's bottom brackets on the sliders.




STEP 6: Lastly, be sure to lock all the brackets in place by pushing in the tab on all four brackets.

*Tip: For a more permanent solution, a metal self-tapping screw may be used in place of the bracket tab.

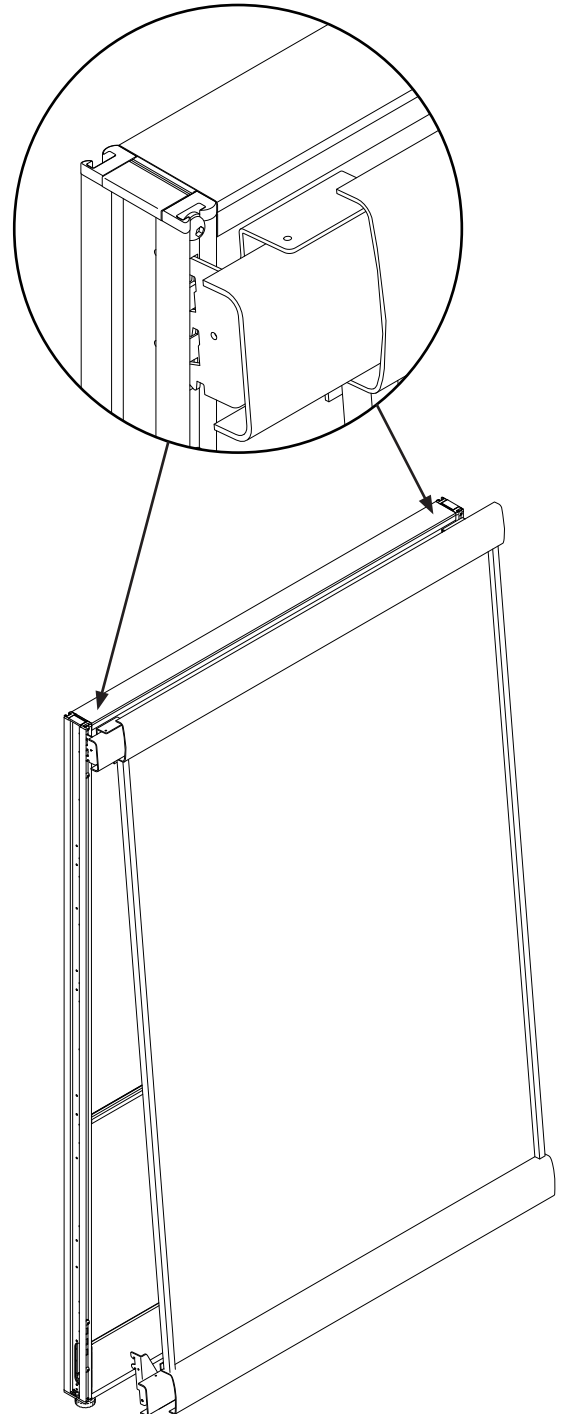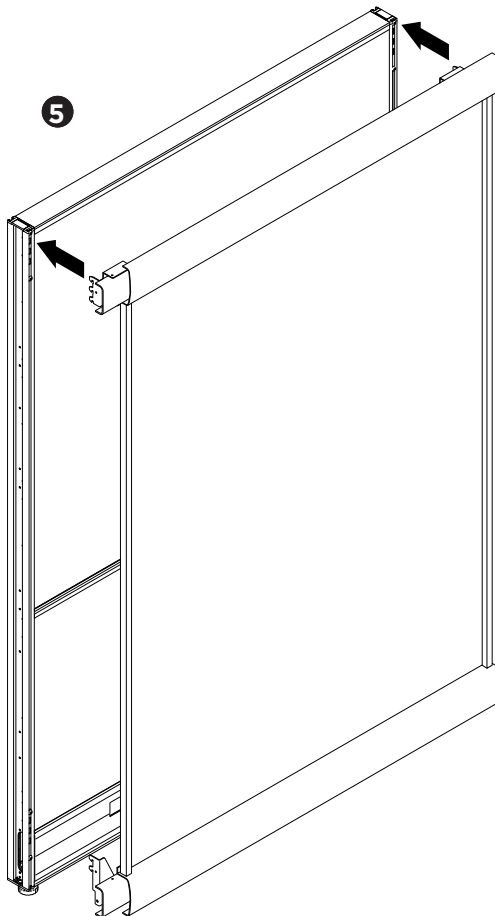

INSTALLATION GUIDELINES

Sliding Door Installation Guide • BPDSL

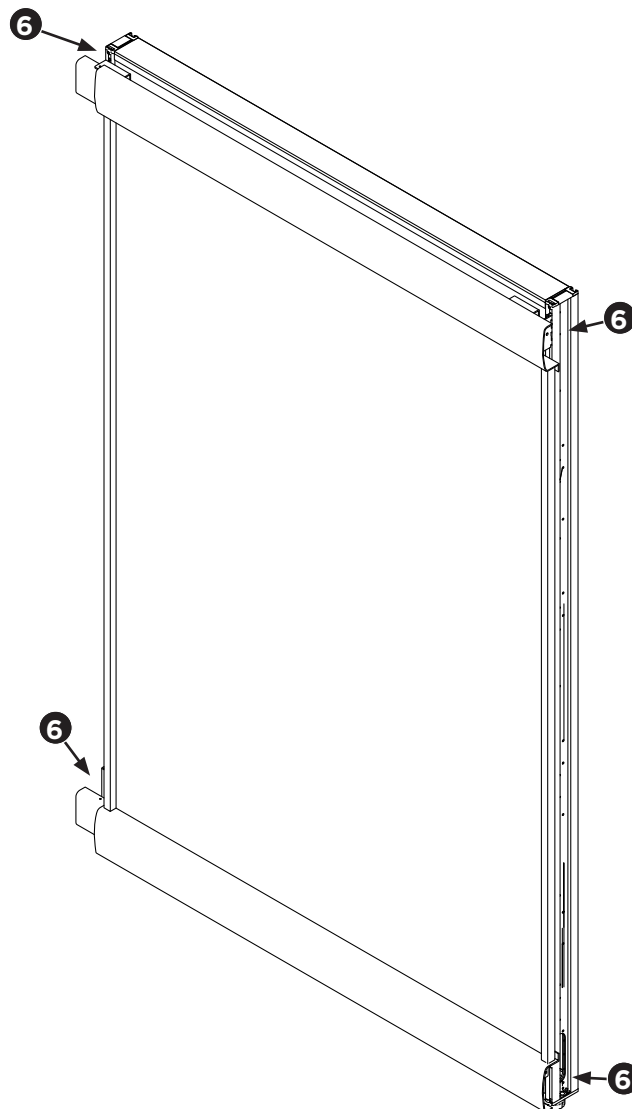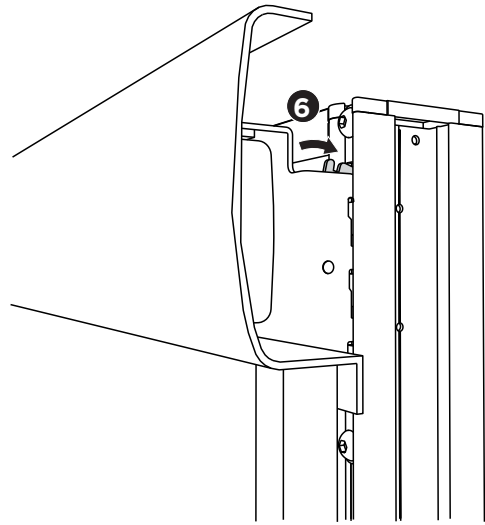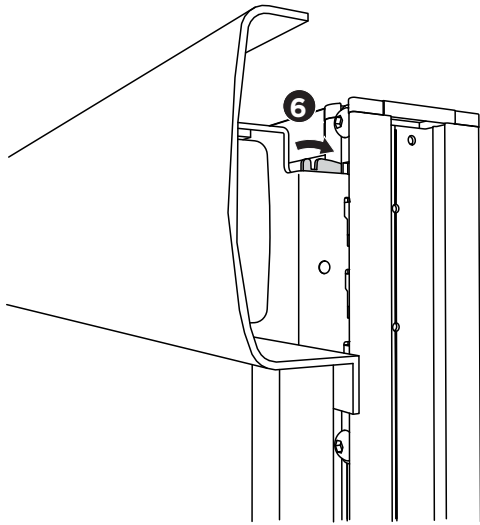

INSTALLATION GUIDELINES

Integrated Privacy Glass and Felt Dividers


STEP 1: Snap the extrusion to the top of the panel.

STEP 2: Inset 2 screws to secure the extrusion.

STEP 3: Place the 2 wide seal on the extrusion.

STEP 4: Place the narrow clear seal at the center.

STEP 5: Push the glass down slowly, after aligning glass evenly on panel. Glass will extend past the extrusion channel to approximately 1/8" from the edge of panel.

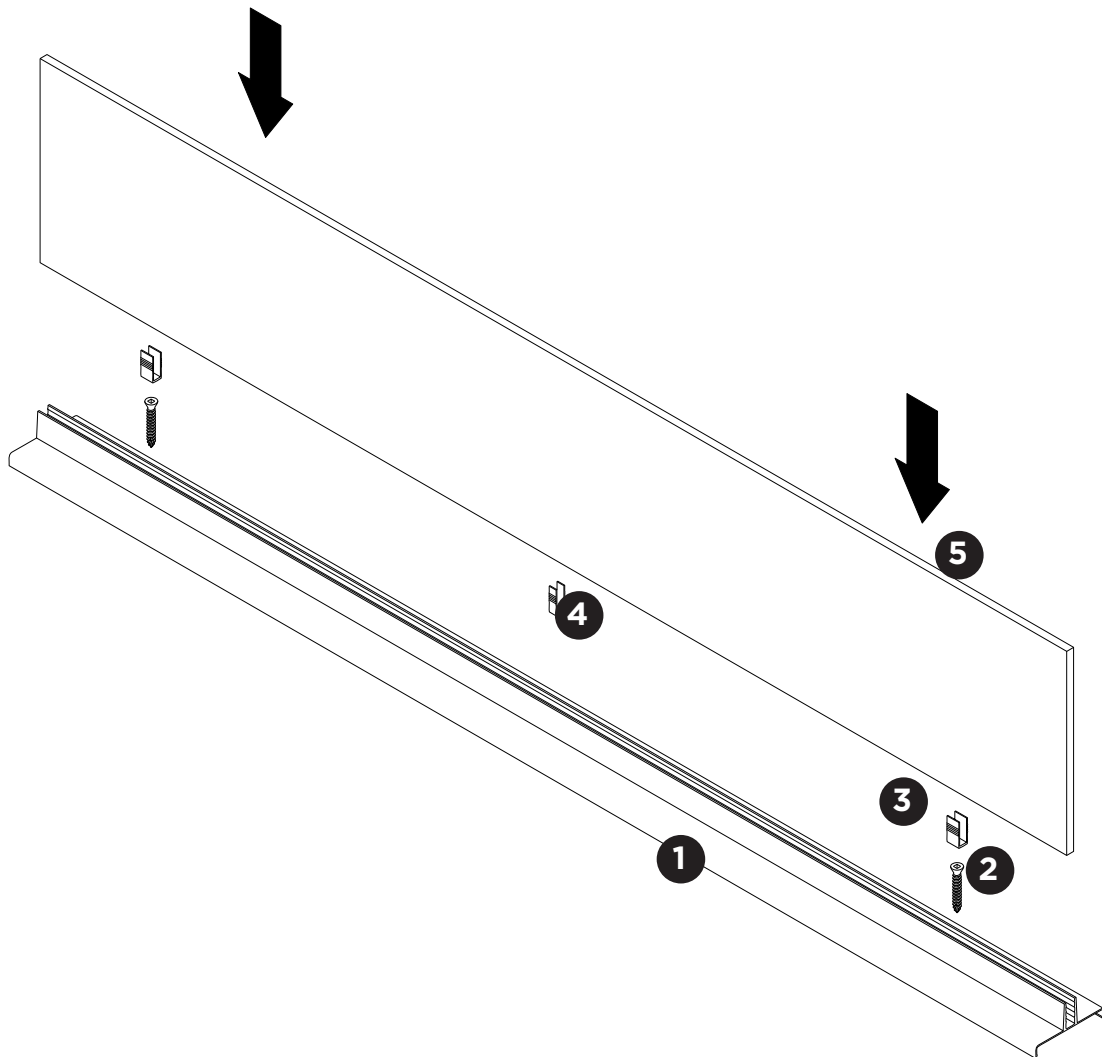

INSTALLATION GUIDELINES

CAPAS Privacy Glass

STEP 1: Open the clamps.






STEP 2: Remove the pin.

STEP 3: Measure 6" from the edge.

STEP 4: Drill directly into the top of the panel. (use the provided #10 1 1/2" pan head square drive type A screw.)

STEP 5: Use the thicker rubber pad if two different size pads are provided in the box.

STEP 6: Leave the clamps loose, carefully slide the glass in and then tighten both clamps evenly so the glass is snug and vertical. the middle set screw will control the pitch.

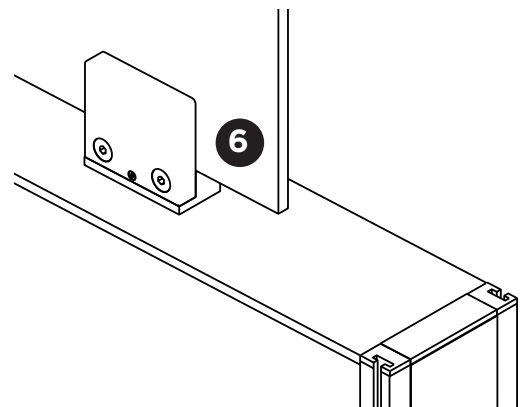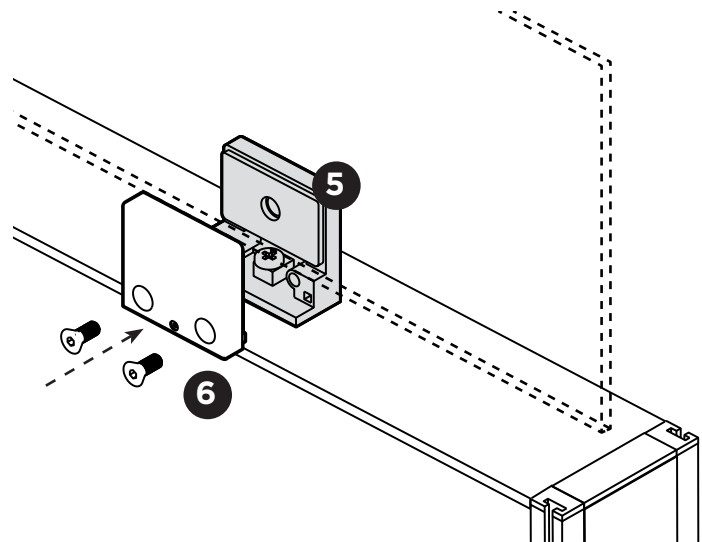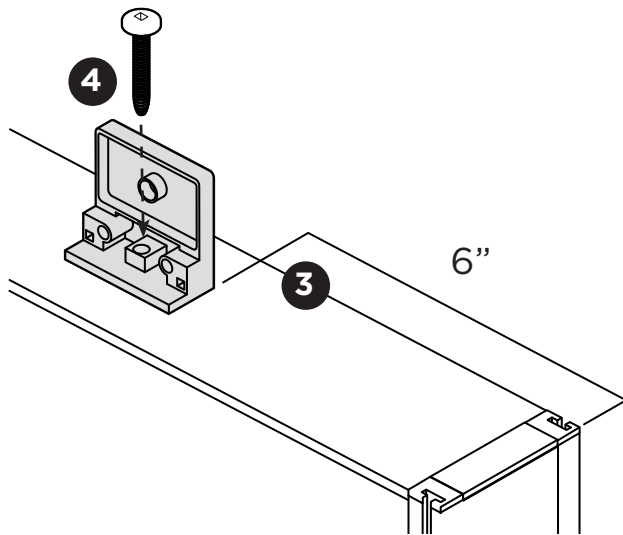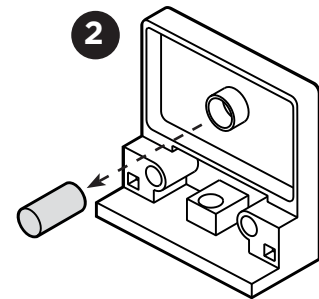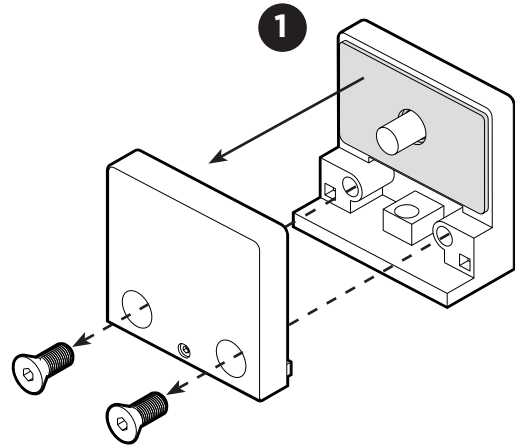


INSTALLATION GUIDELINES

Post Base Covers

STEP 1: Slide Post Base Cover into bottom of Universal Corner Post.

STEP 2: Secure into place on 2 sides, with two small black screws.



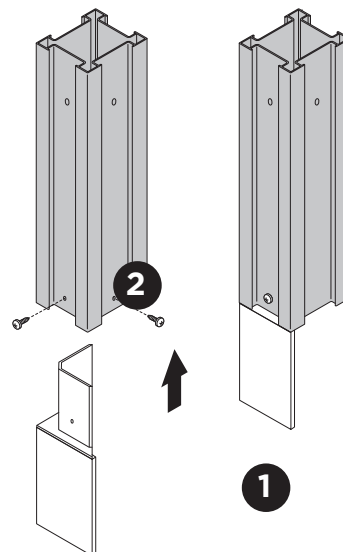


Electrical - Adding Power Distribution Housing

Align Power Distribution Housing so the bottoms tabs drop into the pre-cut slots in the panel base. Be sure to align the spring clips on top, so they are facing you.

Rotate Power Distribution Harness into place until the spring snap securely into place.

Included cable managers can be slid to the side, or removed.

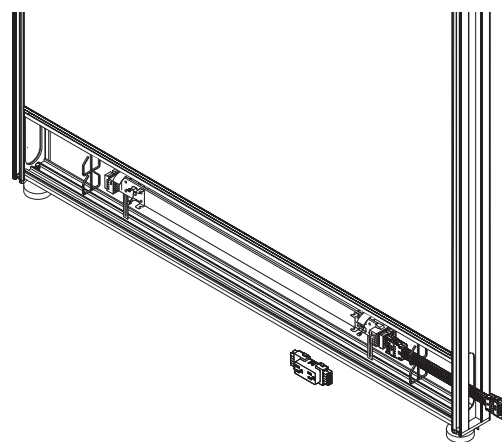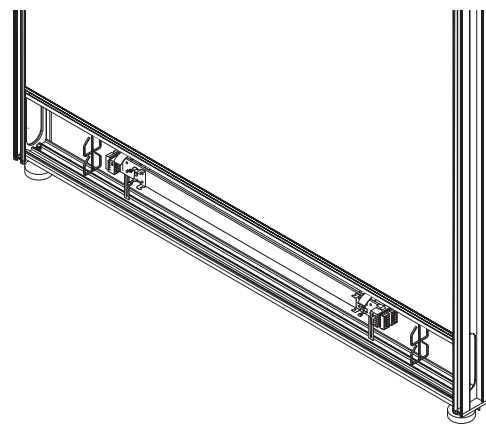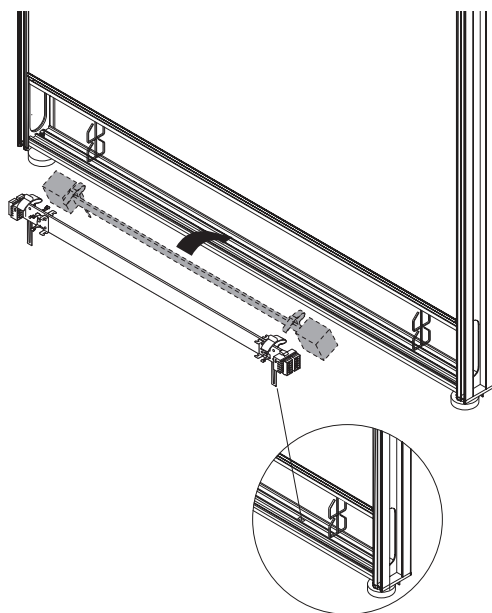


INSTALLATION GUIDELINES

Electrical - Power Distribution Harness and Duplexes

STEP 1: Plug Jumper into Power Distribution Harness, until it clicks firmly into place. The arrow above the embossed "N", should be pointing up.

STEP 2: Slide Duplex into place, until it clicks firmly into place.

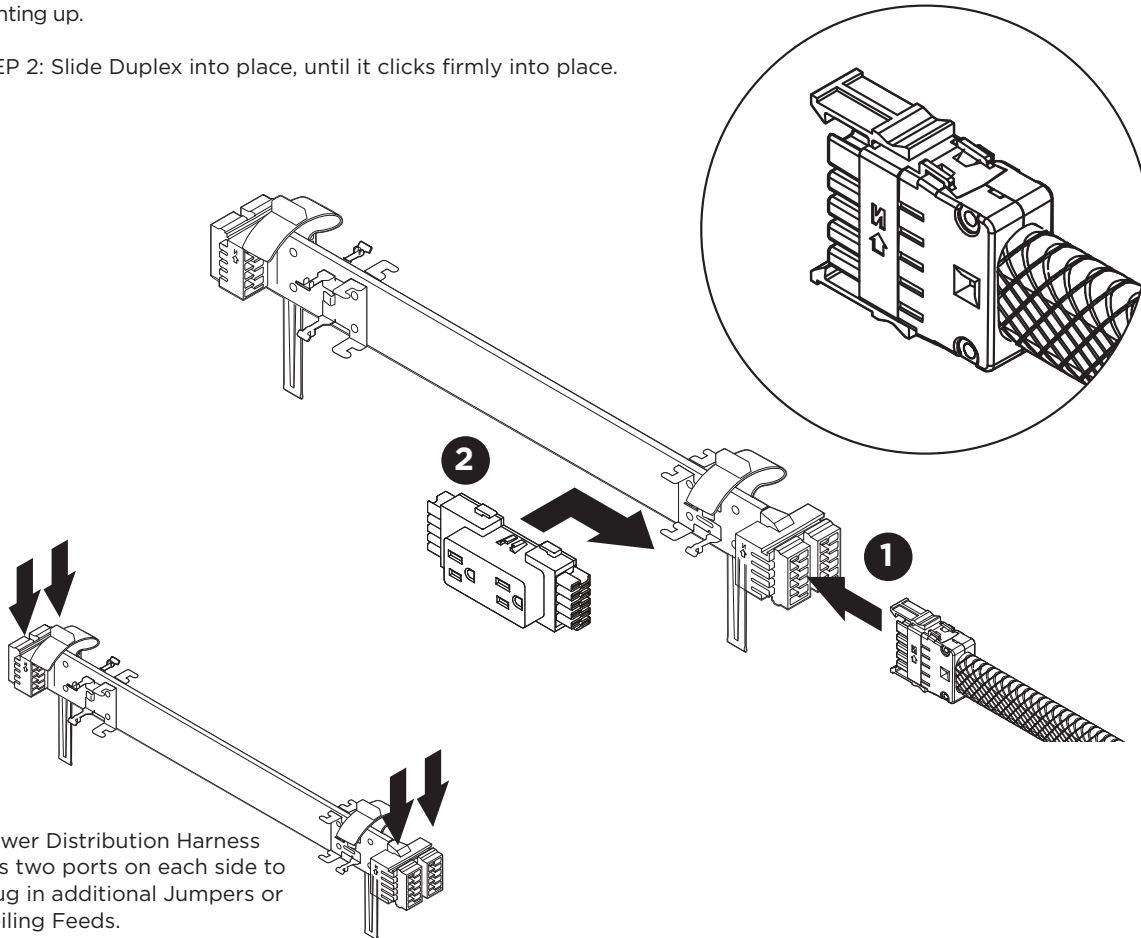


Electrical - Installing Through Corners

Installation Tip: When routing jumpers around corners, in a 2-way, 3-way or 4-way connection.

Bend connection of 17" flexible Mesh Jumper downward, at a 90 degree angle.

Slide connector through opening and pass through openings in both panels.

Straighten connector.

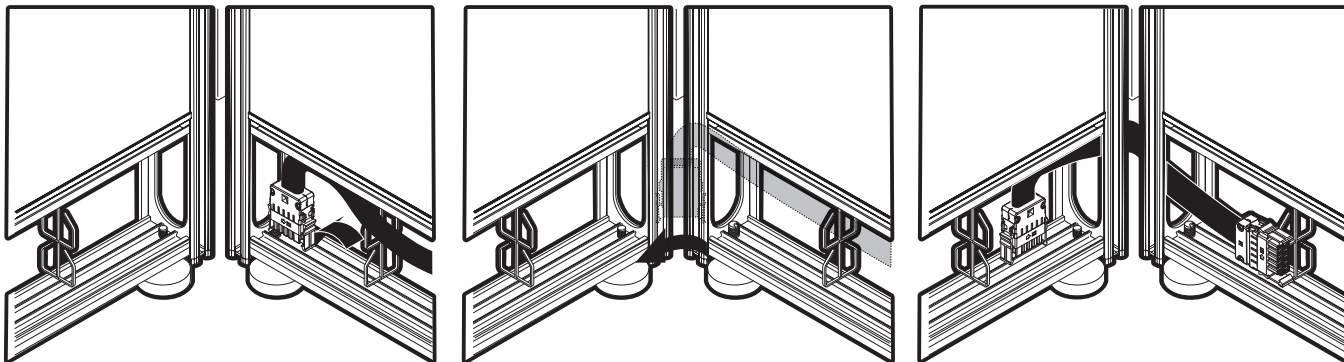

INSTALLATION GUIDELINES

Reversible Floor Power Entry

Parts List

1 Reversible Floor Power Entry


The Floor Power Entry is used to connect the electrical distribution system to the building power network at a floor level junction box. Ensure that all panels are mechanically connected prior to electrical connection.

STEP 1: Conduit can be run in reverse direction by removing the housing cover, "A" rotating the conduit and replacing the housing cover, ensuring that all four (4) screws in the cover are tight.

STEP 2: Proceed with the installation as per the Directional Floor Power Entry (page 14).

STEP 3: Replace the raceway cover.

It is recommended that installation of the electrical harness be made under the supervision of a licensed electrician in accordance with applicable codes and regulations. Refer to the wiring schematic attached to the conduit and shown in this Installation Manual. Always determine that harness is electrically connected to only one power supply.

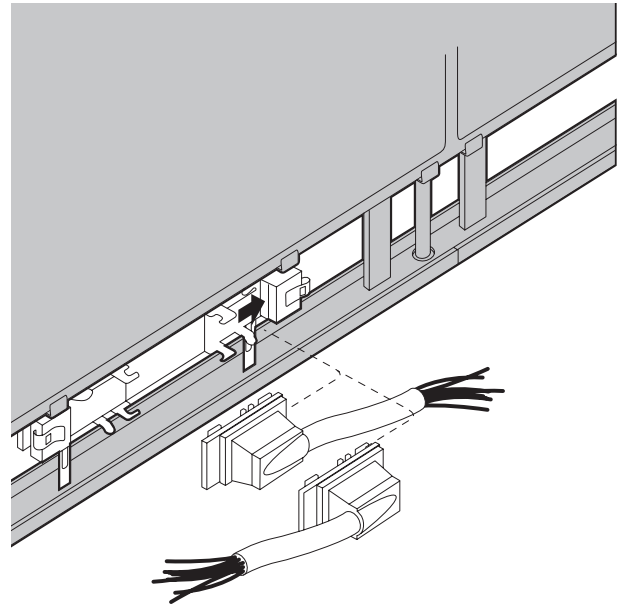

Duplex Receptacle

Parts List

1 Duplex Receptacle


The Duplex Receptacles plug into and mechanically attach to the Power Distribution Housings. The receptacle is internally arranged to connect to the circuitry designated by the symbol on its face.

Ensure that all panels are mechanically connected prior to electrical connection.

STEP 1: Raceway covers must be removed to allow installation.
STEP 2: Select the correct receptacle for the circuit desired at that location.

STEP 3: Position the receptacle into the mounting bracket on the Power Distribution Housing and slide it in toward the electrical assembly. Be sure the parts are fully seated to assure proper electrical connection and the spring lips below the receptacles are properly engaged for mechanical security.


STEP 4: Replace the raceway cover.

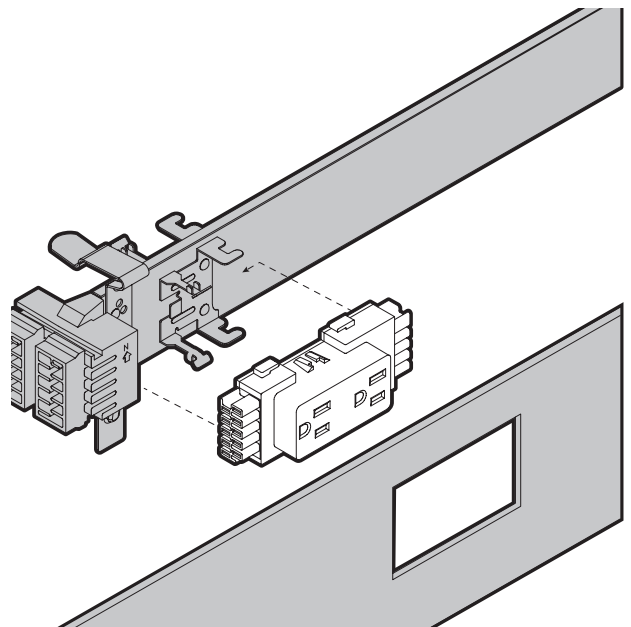

INSTALLATION GUIDELINES

Electrical - 90 degree post cable capacity

Typical application, recommended maximum

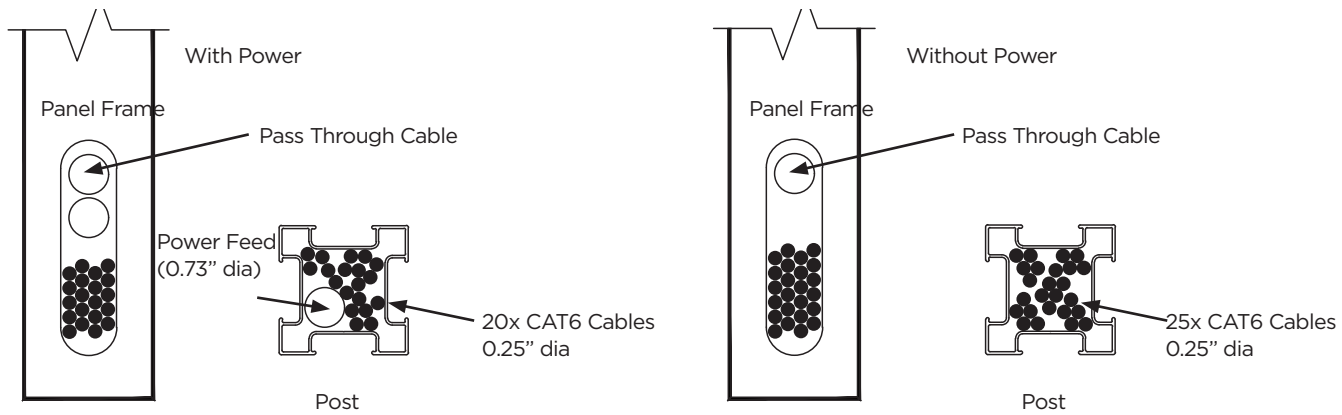

* THESE ARE GUIDELINES ONLY, ACTUAL NUMBERS MAY VARY
BASED ON SITE CONDITIONS AND CLIENT REQUIREMENTS *

Electrical - Ceiling Feed

STEP 1: Disconnect clamp at top of ceiling feed, and remove, tape the wires together.


STEP 2: Lay the Universal Corner Post on the floor. Slide top of ceiling feed through Universal Corner Post, starting at the bottom of the post.

STEP 3: Lay Post Extension inline with the Universal Corner Post. Slide Ceiling Feed through the Post Extension. Attach Post Extension connector plates as indicated in Post Extension instructions, on this page, below.

STEP 4: Slide the ceiling feed into the cut out.

STEP 5: Install the provided post extension clips.

STEP 6: Reattach connector clamp to top of ceiling feed. Install completed Power Pole onto panels, and into ceiling.

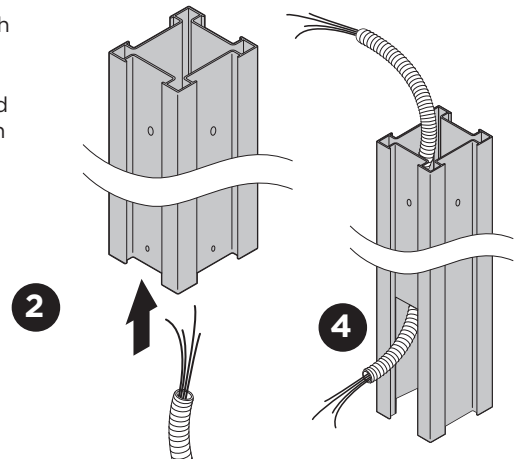


Post Extension

STEP 1: Drill a 6mm hole, screw bottom of attachment plates into universal corner post. Use two plates, opposite to each other for each post extension.

STEP 2: Slide Post Extension Post between attachment plates.

STEP 3: Drill a 6mm hole. Screw top of attachment plates into post extension.

STEP 4: Snap Trims into grooves on all 4 sides of Post Extension. Trim dimension matches post dimension.

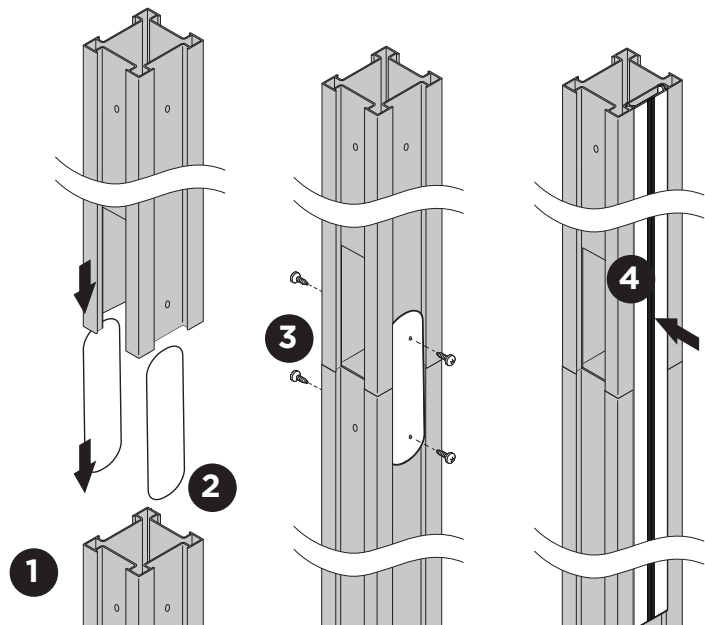


INSTALLATION GUIDELINES

Raceway Covers without Knockouts

STEP 1: Orient Raceway Cover until it is almost VERTICAL and insert top of cover into groove on panel.

STEP 2: Raceway Cover can be lifted up at 90 degrees, and pushed slightly into panel, to lock in place.

STEP 3: Snap bottom corners of Raceway Covers, to secure into place.

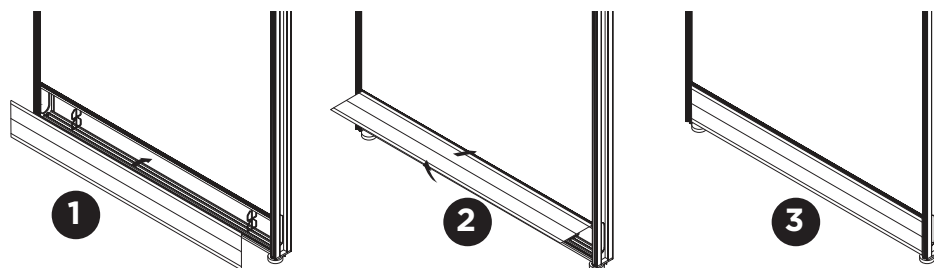


Raceway Covers with Knockouts

STEP 1: Orient Raceway Cover until it is almost VERTICAL and insert top of cover into groove on panel.

STEP 2: Raceway Cover can be lifted up at 90 degrees, and pushed slightly into panel, to lock in place.


STEP 3: Snap bottom corners of Raceway Covers, to secure into place.

STEP 4: Raceway Covers lock securely in place on both ends, securing over black tabs in panels.

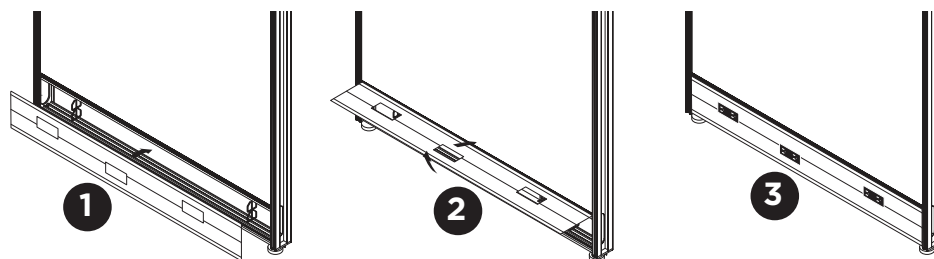

Raceway Knockout Covers

Snap Raceway Knockout Covers into openings where duplexes are not being used.

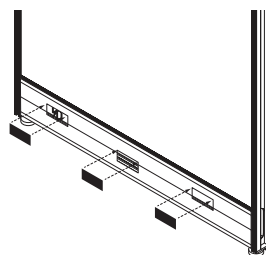

INSTALLATION GUIDELINES

Cantilevers / Corner Brackets

Installation Tip:

• Build from the BOTTOM....UP!


- Slide all Worksurface Supports and Brackets into place...FIRST. Tackboards/Writeboards /Load Bars, SECOND. Overhead Storage / Shelves, THIRD.

STEP 1: Slide worksurface supports, with connection plate and screws attached, into groove on side of panel.

STEP 2: Make sure that the screws are flush, and do not protrude through the connection plate.

STEP 3: Securely attach all screws using a #4 ALLEN BIT, or TORX T25 HEAD BIT.

Alignment Gauges are provided with every cantilever and corner bracket.

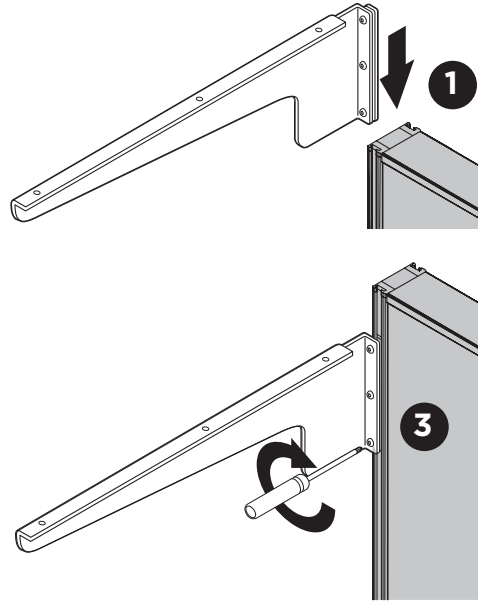



Mid Span Support Brackets (Can ONLY be used with Segmented Panels)

STEP 1: Insert bottom portion of Mid Span Support bracket into segmentation channel, below worksurface height.

STEP 2: Lift bracket to secure it into segmentation channel.

STEP 3: Secure bracket to worksurface using short wood screws.


STEP 4: Mid Span Support Brackets can be used as additional support for longer worksurfaces or to create an off-module connection, as shown.

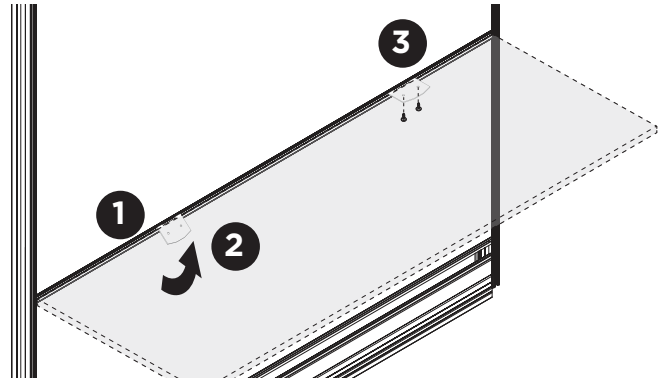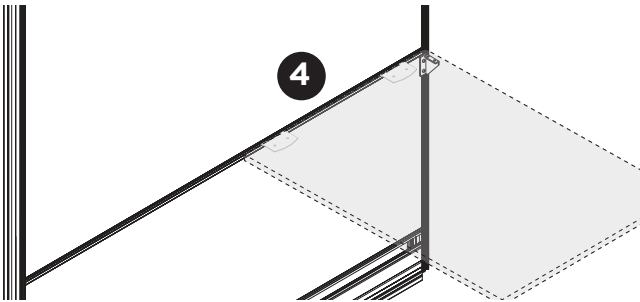

Adjacent Worksurface Mounting

Two Cantilevers, leveled side-by-side with Flat Plate to align front edges of worksurfaces.

One Corner Bracket, plus (2) Mid-Span Support Brackets (using Segmented Panels ONLY) to create an off-module worksurface connection.

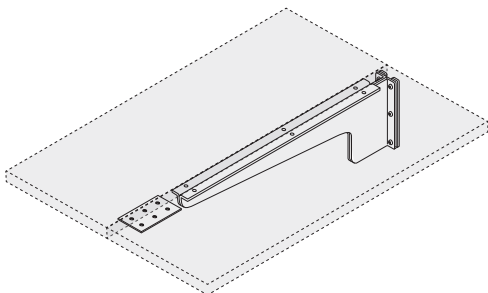

INSTALLATION GUIDELINES



CHMEG Metal End Gable

STEP 1: Slide the small slider into the channel of the panel to the bottom.

STEP 2: Engage the leg into the panel's rail by rotating it into place.

STEP 3: Lift up the slider so it is underneath the leg bracket, supporting the leg.

STEP 4: Install the worksurface while making sure the leg is perpendicular to the panel.

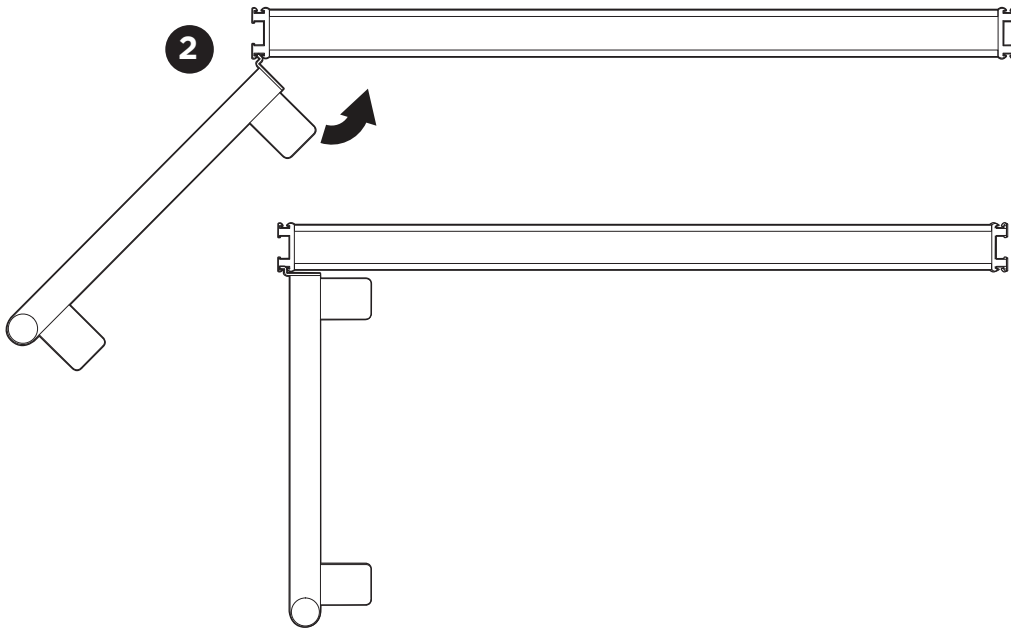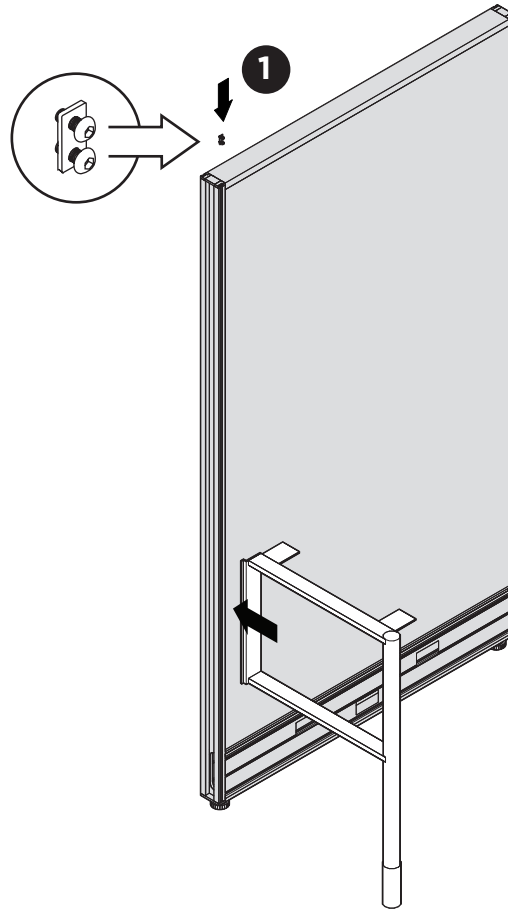

INSTALLATION GUIDELINES

Pedestal Bracket / Corner Plate

Ensure that all panels are leveled and securely connected before proceeding with installation of worksurfaces supports.

STEP 1: Align the first bracket's edge with pedestal's top corner and rear vertical edge as illustrated.

STEP 2: Secure the top bracket with supplied, self-drilling, counter-sunk head screws.





STEP 3: Angle the pedestal on the floor and insert bracket ends into panel's vertical side groove.

STEP 4: Rotate the pedestal while making sure that both brackets remain securely engaged inside the panel's vertical side groove. Install worksurface support on the opposite side of the worksurface as specified. Rest worksurface on both supports.

STEP 5: Adjust pedestal's levelers to level the worksurface and ensure that the pedestal's side is perpendicular to the panel.

NOTE: Read before you proceed with the next step! If you use a full depth pedestals (24" deep pedestal under 24" deep worksurface) to secure worksurfaces to a panel with optional Panel cable manager, do not bolt the pedestal to the worksurface yet. You may have to angle and slide the pedestal partially out in order to gain an access to the panel's cable manager. In this case, the following step (#6) should be done at the end of the installation, after all cables had been tucked away in the Panel cable manager.

STEP 6: Remove drawers, pre-drill the pedestal top and drive two wood screws through the pedestal top, into the worksurface. Replace the drawers and secure the opposite side of the worksurface to its support.

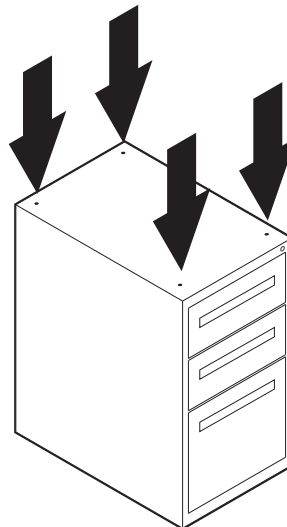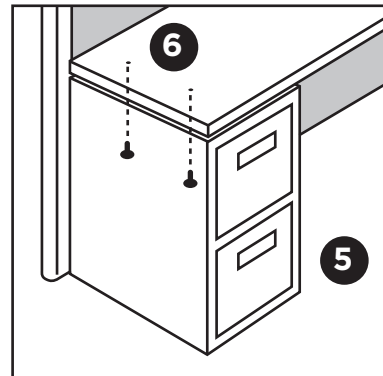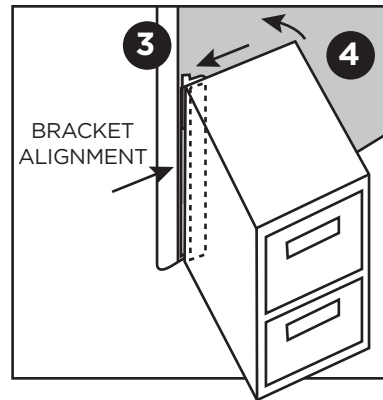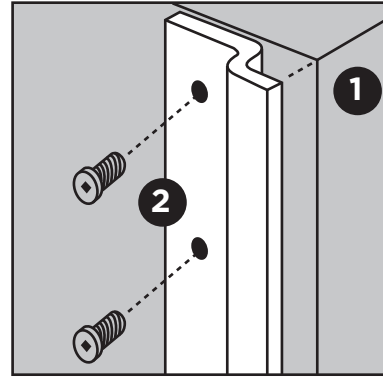

Compile Pedestals come shipped with cardboard protection on top, bottom and all four corners, and then shrink wrapped.

Compile Pedestals may be stacked up to 3 high, in the shipping trailer, during delivery.



All Worksurface Supporting Pedestals ship with holes punched in the tops, on all four corners, to allow simple attachment to worksurfaces., using wood screws less than 1" long.

Compile Pedestals ship with leveling glides on all four corners. Please use a drill, with standard drill bit extension, to level pedestal to proper height, prior to attaching screws to worksurface.

INSTALLATION GUIDELINES

Centre Mounted Overhead

1. Install the corner brackets so they align with the very top of the panel.
2. Measure and centre the overhead on top of the panel.
3. While someone holds it in place, fasten the overhead to the brackets with the provided screws.

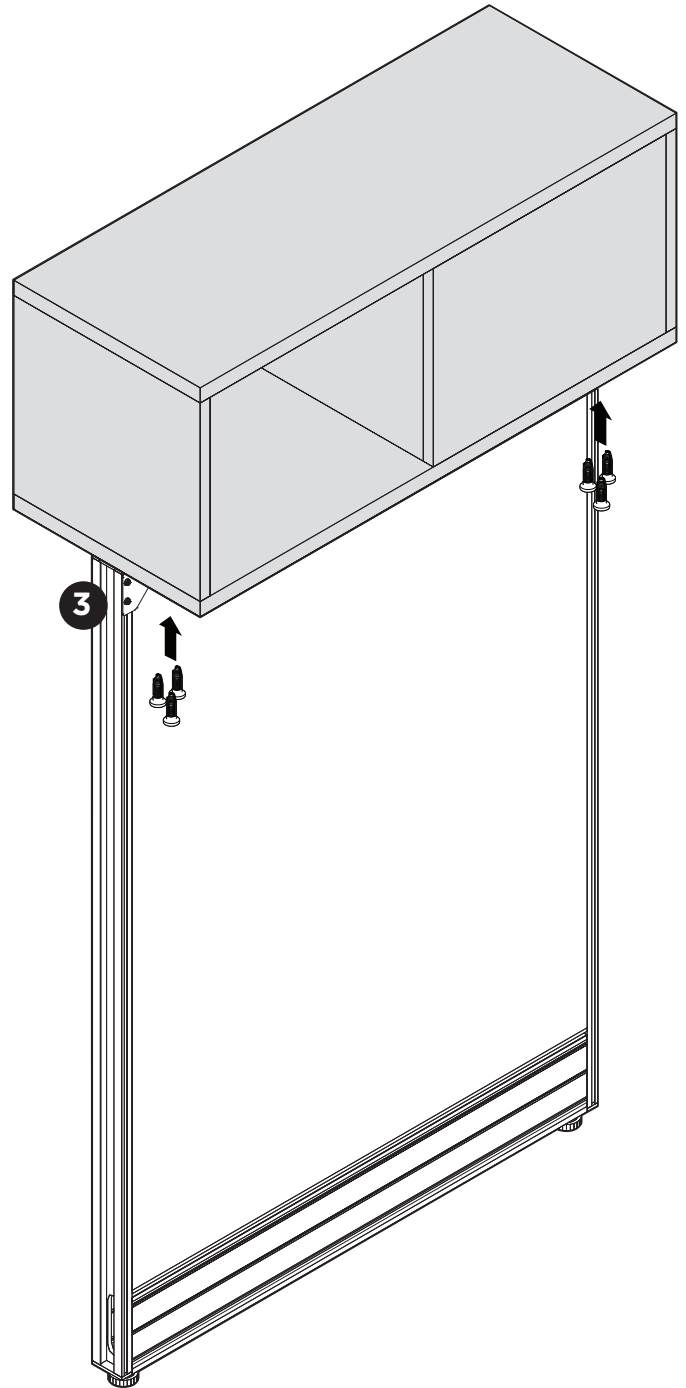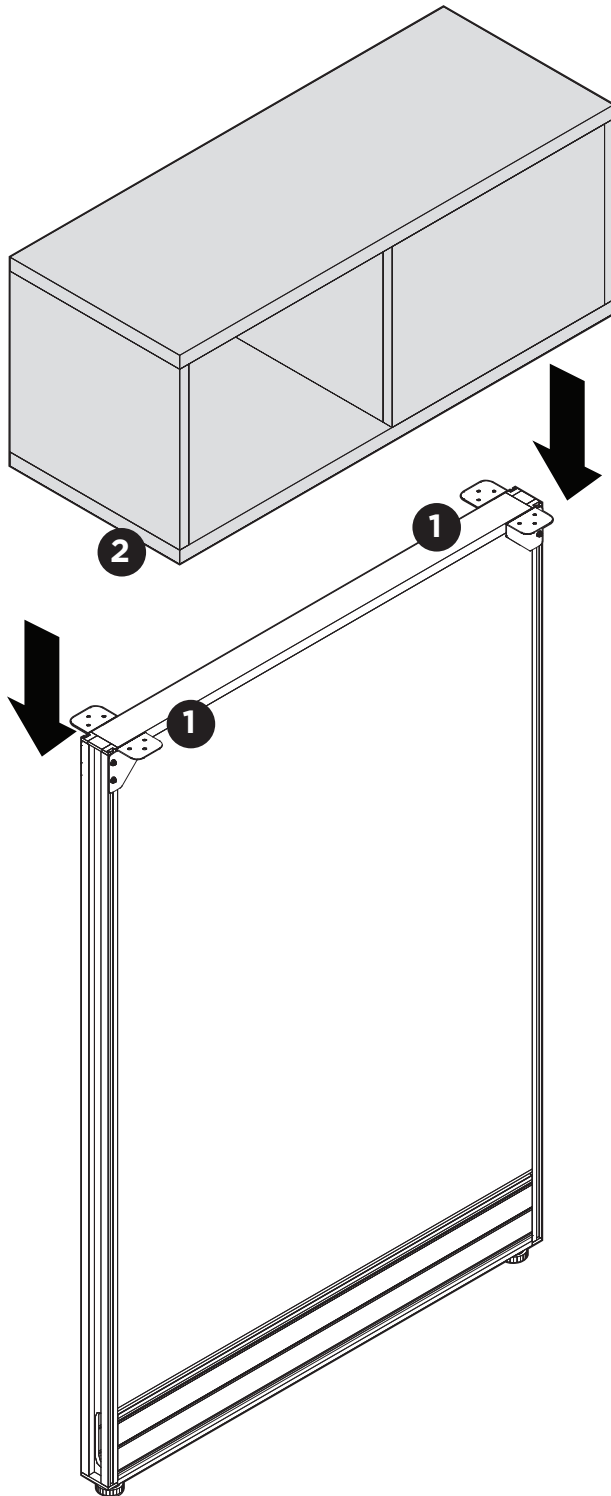

INSTALLATION GUIDELINES

Low Profile Shelves

STEP 1: Slide Low Profile side supports, with connection plate and screws attached, into groove on side of panel.

STEP 2: Align bottom of Low Profile side support with bottom of Overhead Storage Cabinet, if applicable, use the supplied shelf gauge

STEP 3: Securely attach all screws using a #4 ALLEN BIT, or BALL TORX T25 BIT, on one side only.

STEP 4: Securely attach ONE screw using a #4 ALLEN BIT, or BALL TORX T25 BIT, on second side only.




STEP 5: Place bottom shelf on top of bottom brackets.

STEP 6: Using a level, hold second shelf side, loosen screw. Align shelf side until level.

STEP 7: Remove bottom shelf and securely attach all cap nuts.

STEP 8: Replace bottom shelf on top of bottom brackets.

STEP 9: Securely attach all screws using a #2 Phillips bit.

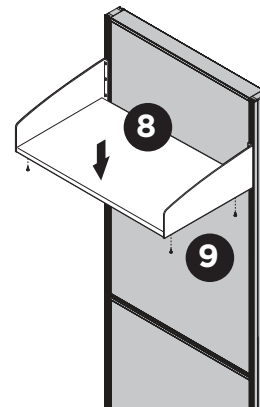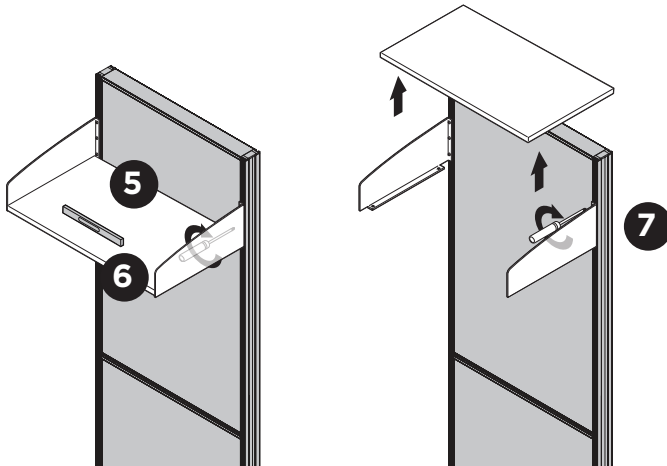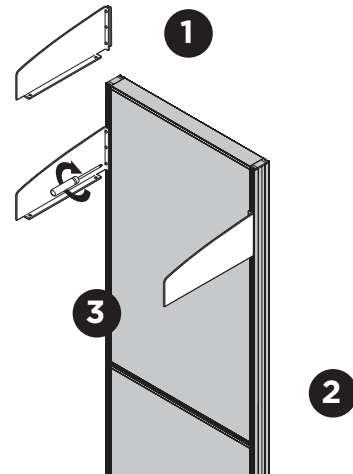

INSTALLATION GUIDELINES

Overhead Storage Bins

STEP 1: Slide overhead side supports, with connection plate and screws attached, into groove on side of panel.

STEP 2: Align top of overhead side support with top of panel.

STEP 3: Securely attach all screws using a #4 ALLEN BIT, or TORX T25 HEAD BIT.





STEP 4: Place bottom shelf on top of bottom brackets.

STEP 5: Securely attach all screws using a #2 Phillips bit.

STEP 6: Place top shelf, with door attached, on top of brackets.

STEP 7: Securely attach all screws using a #2 Phillips bit.

STEP 8: Oblong holes in door slider hardware ,allow door to be centered on cabinet.

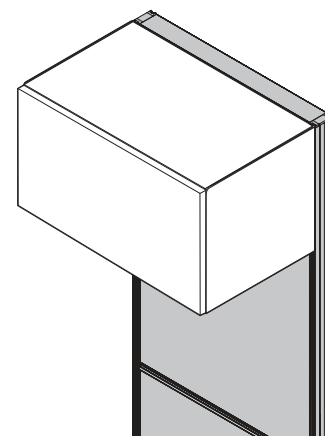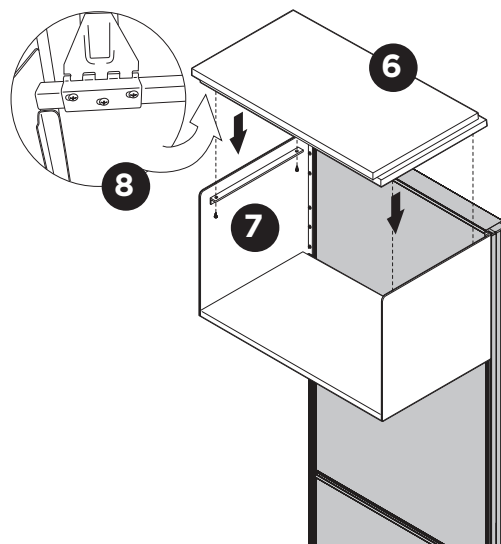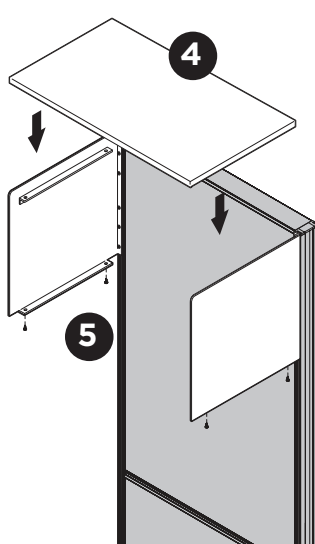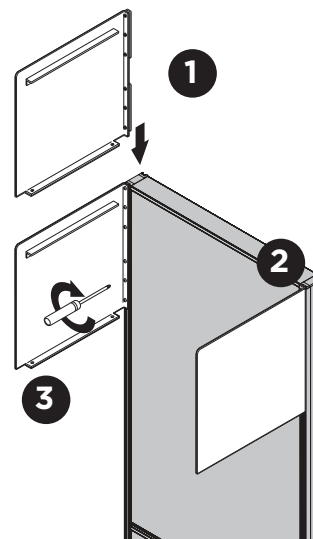


INSTALLATION GUIDELINES

ADA Overhead

STEP 1: Slide down the supplied 2 - two hole sliders into the side grooves of the panel to their position using a gauge. Typical installation is 15" from the top of the panel.

STEP 2: Slide the ADA from top down until you meet with the 2 hole sliders already installed.

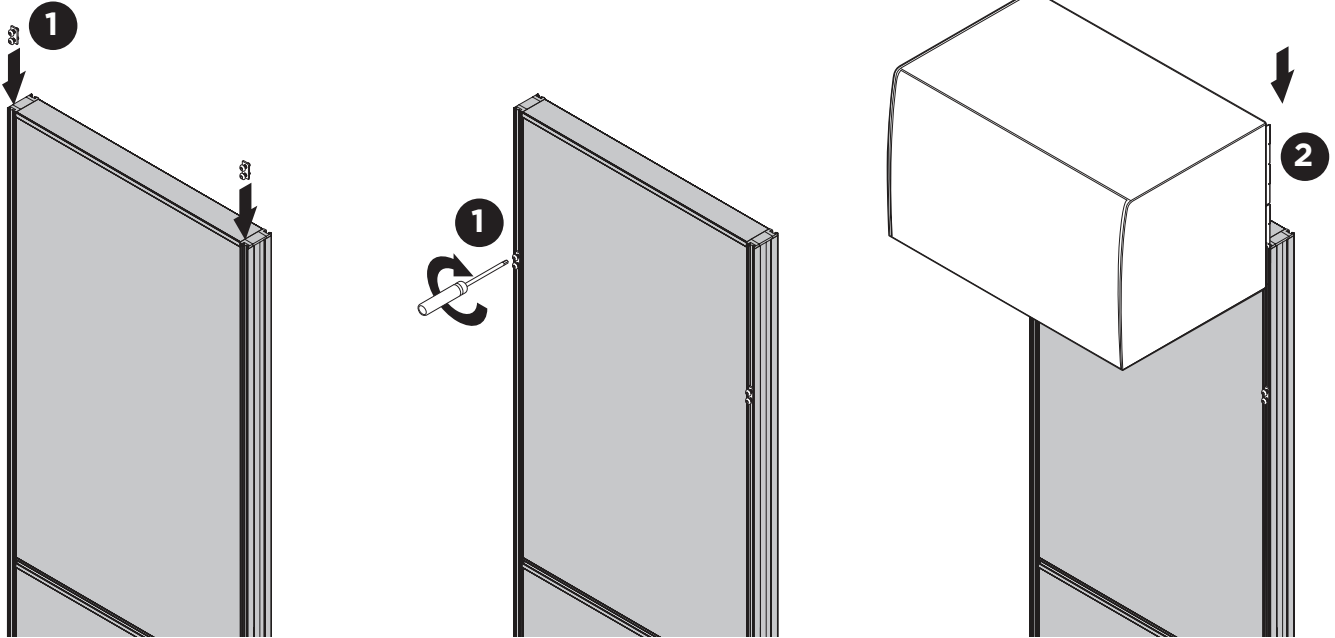



Mid Run Panel Removal & Top Horizontal Replacement

STEP 1: Insert the crowbar under the bottom of the vertical and lift until the connectors at the top disengage.

STEP 2: Repeat the above step and release the panel from the row.

STEP 3: Screw out the two screws (each side) and release the top horizontal. Replace with the new top horizontal.

STEP 4: Drop down one side of the panel then drop down the following side into the connectors. (Use clamp vise grips to bring the panels close to each other while the drop down panel is raised above the connectors.)

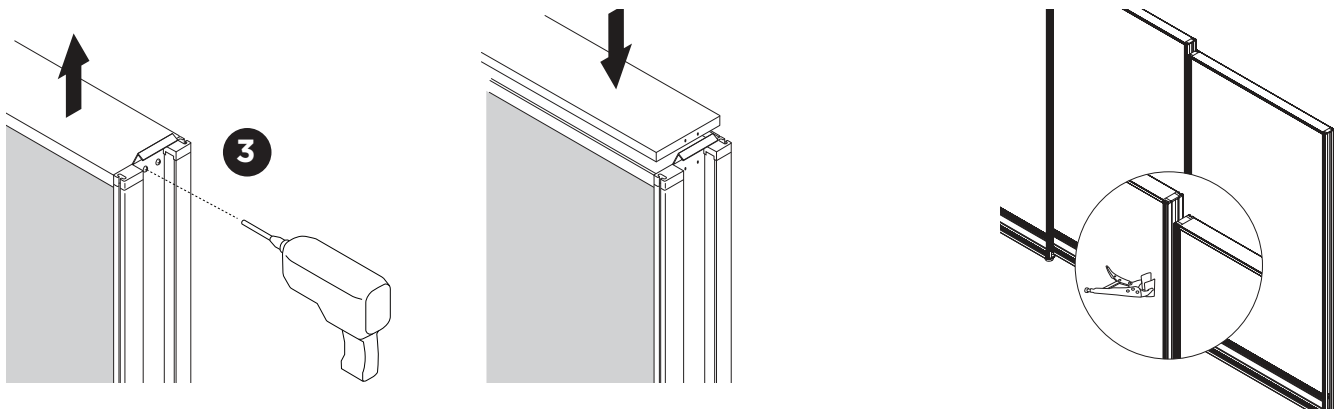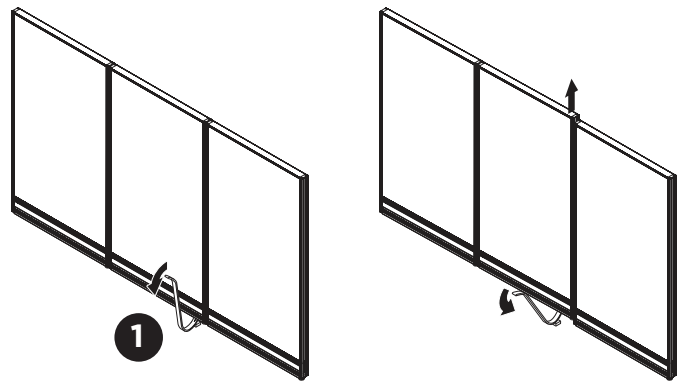


INSTALLATION GUIDELINES

Tackboards

STEP 1: Slide universal brackets, with connection plate and screws attached, into grooves on each side of panel.

STEP 2: Securely attach all screws using a #4 ALLEN BIT, or TORX T25 HEAD BIT.

STEP 3: Hang tackboard hooks, into notches on universal bracket.

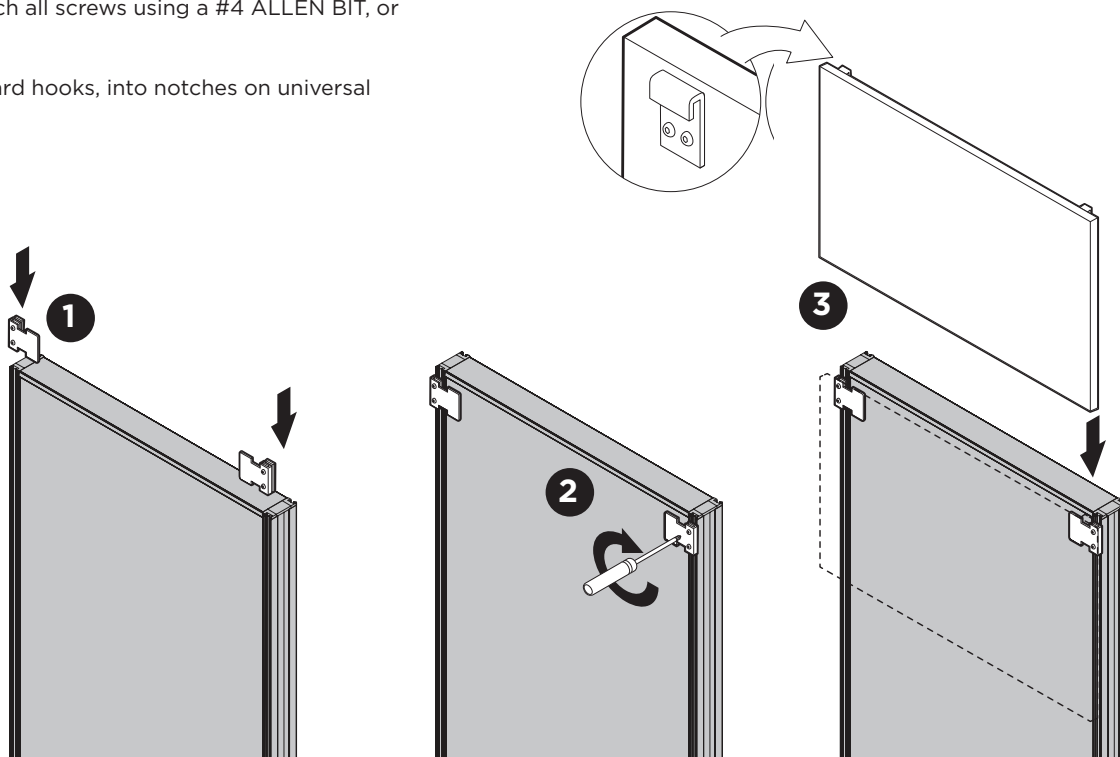

Load Bar


STEP 1: Attach universal brackets, with connection plate and screws attached, into groove on back of Load Bar.

STEP 2: Attach end caps to both sides, to secure the Load Bar to the universal brackets.

STEP 3: Slide Load Bar with bracket assembly into grooves on sides of panels.

STEP 4: Position Load Bar into desired position, using a level.

STEP 5: Securely attach all screws using a #4 ALLEN BIT, or TORX T25 HEAD BIT.

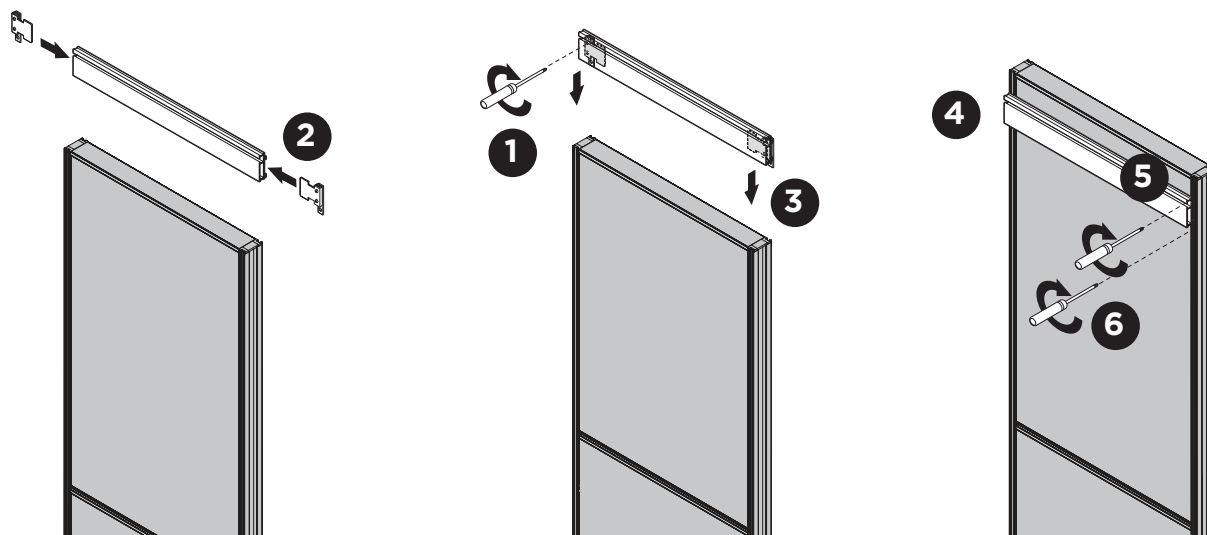

INSTALLATION GUIDELINES

Core Replacement





STEP 1: Insert the crowbar under the bottom of the vertical and lift until the connectors at the top disengage. Repeat for the other side and release the panel from the row.

STEP 2: Unscrew both side verticals and the bottom 2 screws

STEP 3: Slide out the core and replace with new fabric one.

STEP 4: Screw back all the vertical side and 2 bottom screws

STEP 5: Drop down one side of the panel then drop down the following side into the connectors. (Use clamp vise grips to bring the panels close to each other while the drop down panel is raised above the connectors.)

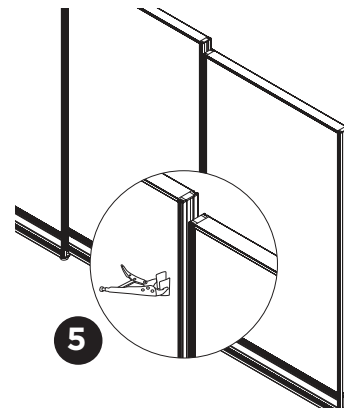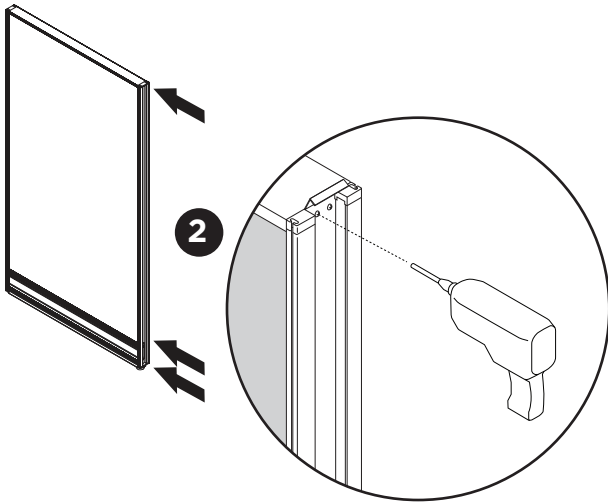
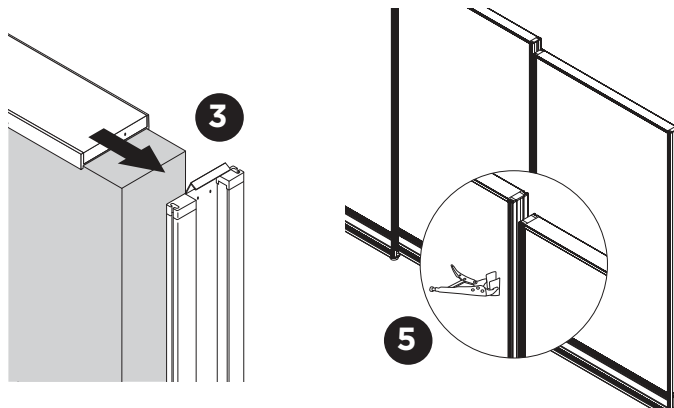
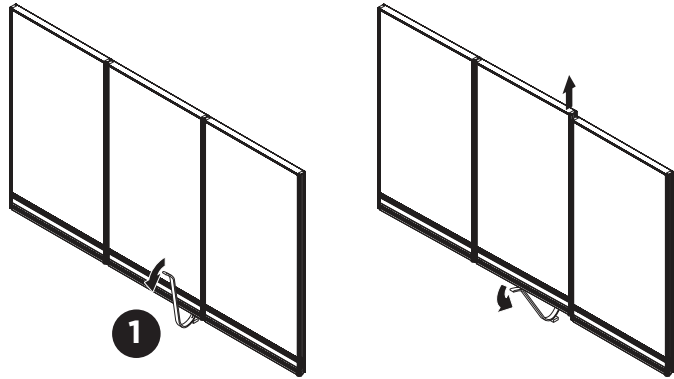


Chicago J-Box

STEP 1: Insert the bottom bracket into the power distribution slot.

STEP 2: Insert the top bracket into the inner groove and place it in front of the bottom bracket.

STEP 3: Take the Junction Box and attach it to the two brackets with supplied hex screws.

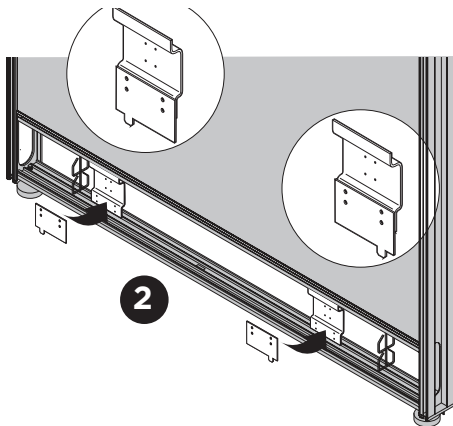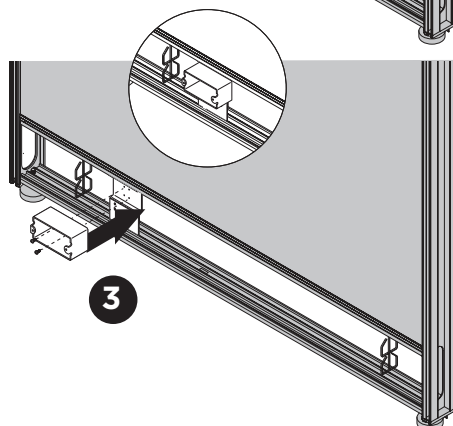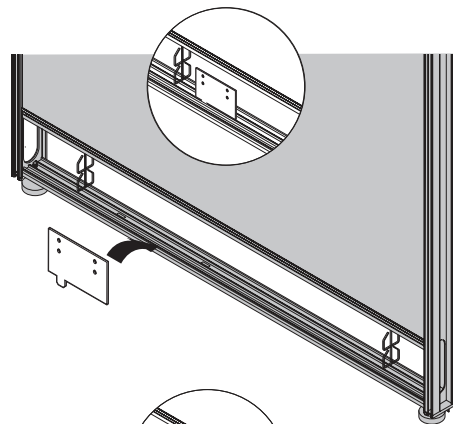

INSTALLATION GUIDELINES

Module Replacement

Applies to: fabric or laminate replacement. Conversion from glass to fabric, or fabric to glass.

STEP 1: Remove the square #1 screws along the vertical part of the panel frame. *DO NOT remove the Phillips screws found at the bottom!

STEP 2: Carefully remove the piece without causing any damage.

STEP 3: If replacing a fabric module, remove the screws on the other side of the panel, then slide the fabric module out.

*Steps 4 and 5 are for glass modules. If replacing fabric, skip to step 6.

STEP 4: Slide the glass out.

STEP 5: Carefully pry the glass frame off using a pick or a screwdriver.

*avoid damaging the panel components!

STEP 6: Slide the new fabric module in.

STEP 7: Carefully reattach the vertical part of the panel frame and gently close any visible gaps between the pieces.

STEP 8: Reinstall all the screws and check for any gaps around the panel frame.

Reinstall all the screws and check for any gaps around the panel frame.

STEP 9: If the new screws were shipped along with the new fabric module, install them as well.

INSTALLATION GUIDELINES

End Panel


STEP 1: Align the holes of the **worksurface brackets (1)** with the pilot holes (2) on the top of the **end panel (3)**. Drive the supplied screws into the end panel but do not over tighten.

STEP 2: Attached the **panel mounting brackets (4)** to the end panel, while aligning the bracket holes with the pilot holes of the end panel.



STEP 3: Attach the end panel to the Compile panel's vertical rail (5). Put it on an angle then rotate it into its place.

STEP 4: Adjust the levelers as needed, making sure the end panel will keep the worksurface level.

STEP 5: Proceed with the installation of the worksurfaces.

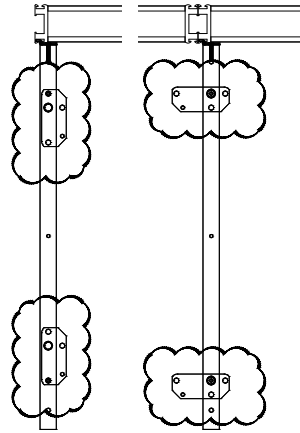

Installation Tip: Identify correct setting of worksurface mounting brackets (left and right, single or supporting adjacent worksurface) and install the panel mounting bracket accordingly.

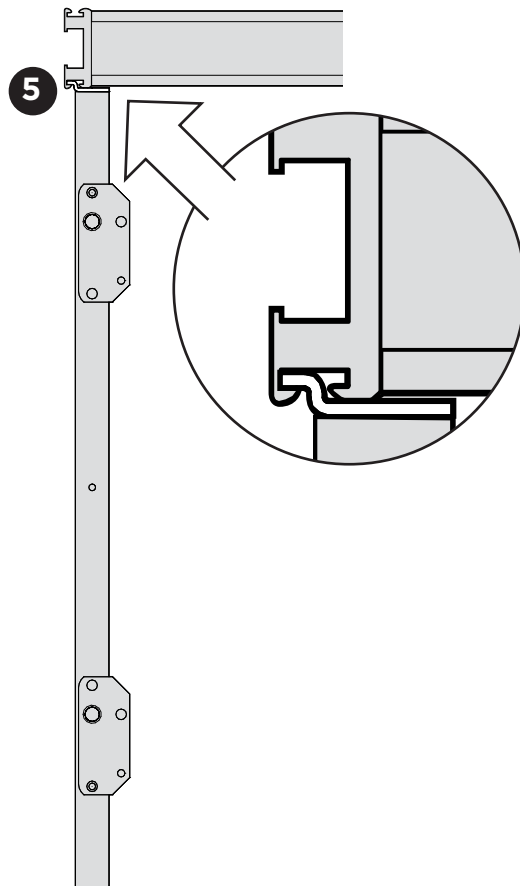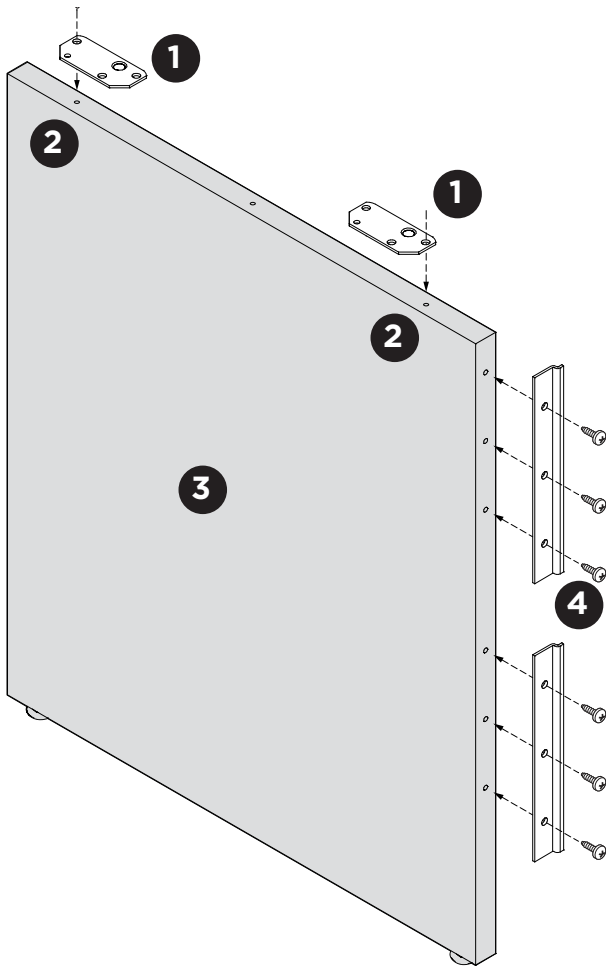


INSTALLATION GUIDELINES

Accessory Retainer

STEP 1: Mount the accessory on the load bar.

STEP 2: Push the accessory retainer (1) into the gap above the accessory (2) to lock it into place.

3" black rubber retainer for use with paper management accessories.
This locks and prevents accessories from falling off the load bar.

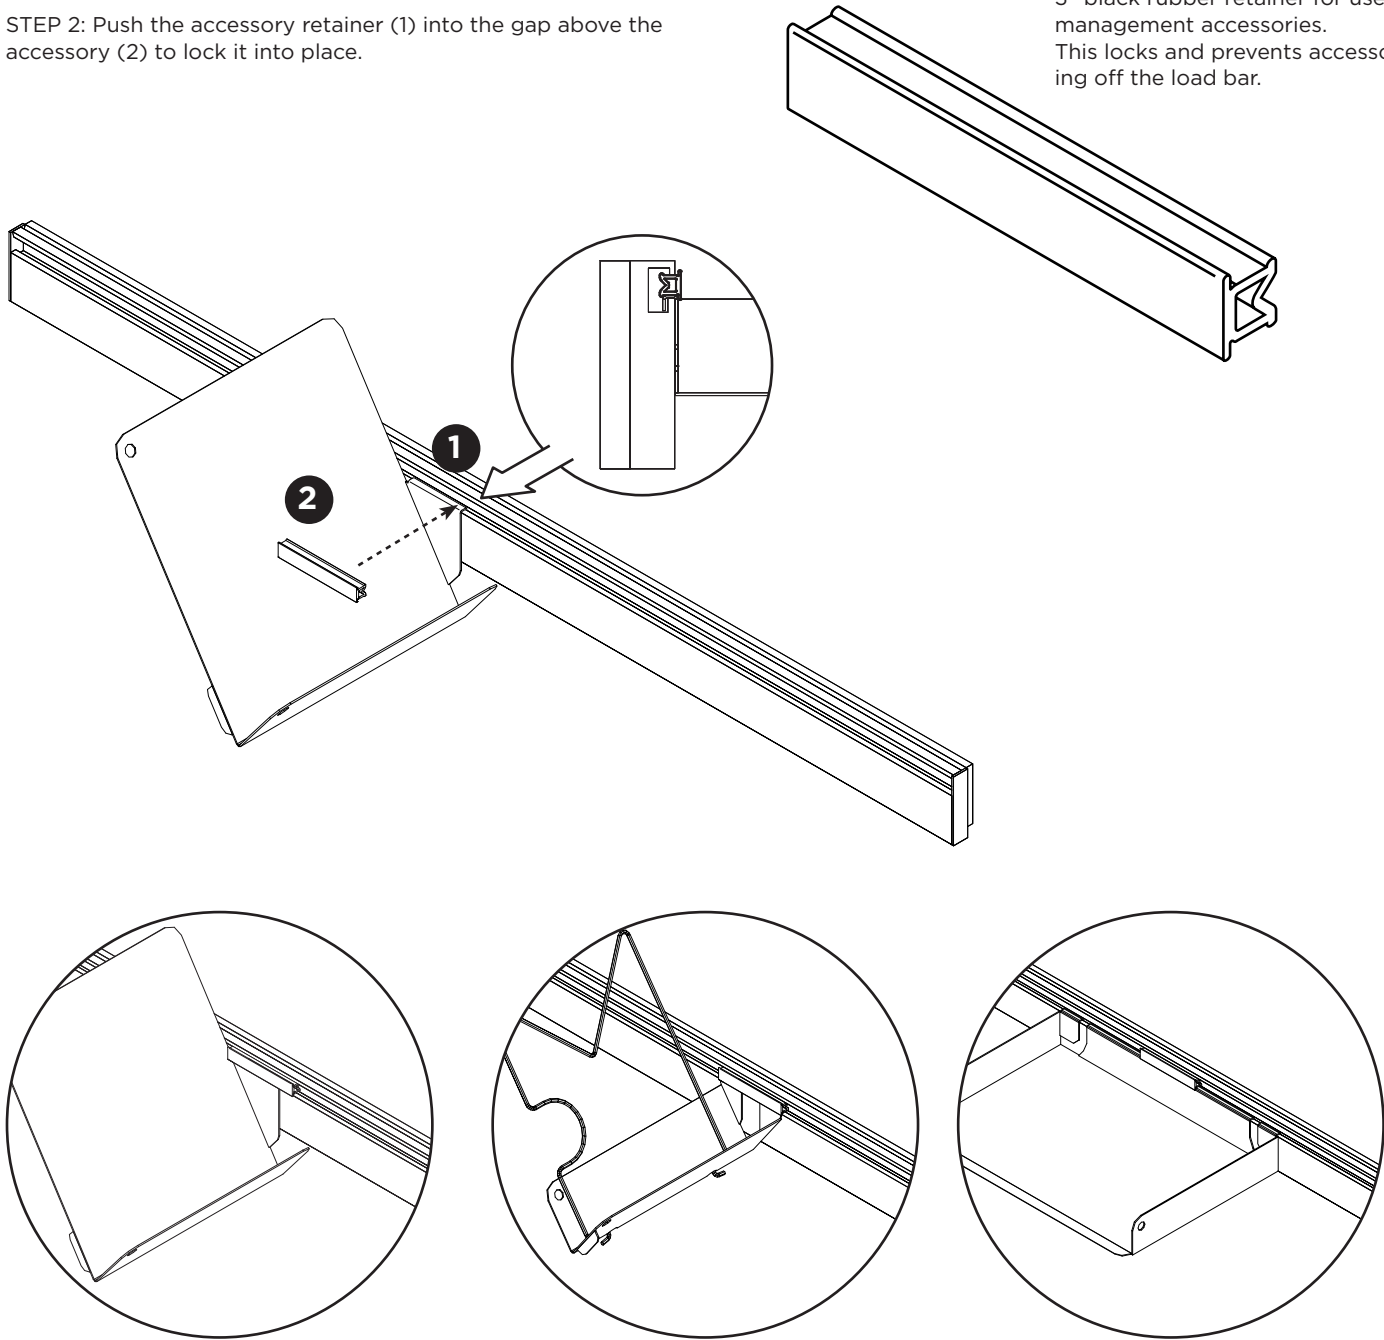



INSTALLATION GUIDELINES

Freestanding Flat Leg

STEP 1: Remove the existing levelers from the panel.

STEP 2: Line up the countersunk holes with the threaded holes.

STEP 3: Use the four M8 1.25x30mm screws to attach the legs.

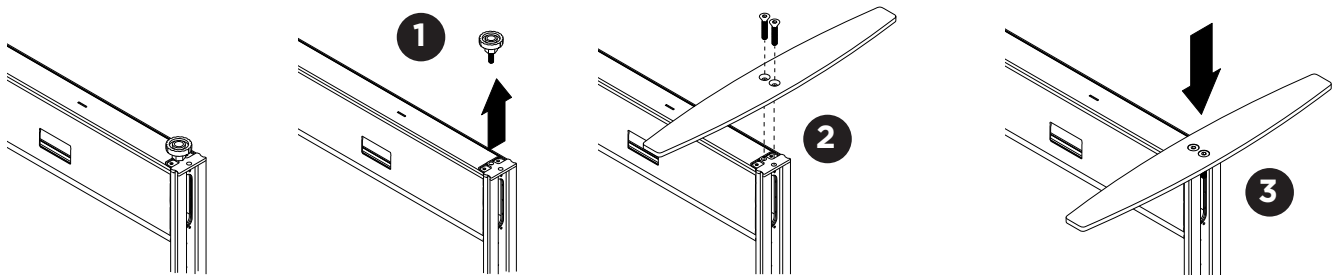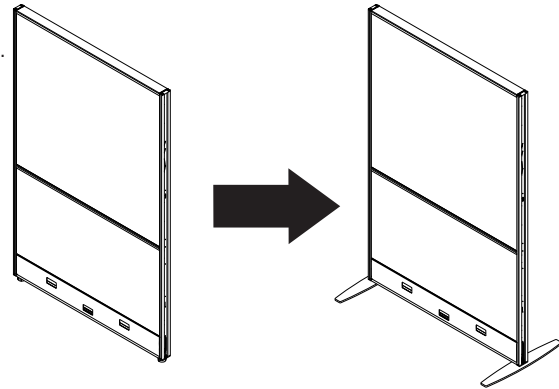



showrooms and distribution centers throughout the united states

SHOWROOMS

Atlanta
10 10th Street, Suite 150
Atlanta, GA 30309
T 404.879.0998
F 404.879.9995

Chicago
The Merchandise Mart
10th Floor, Suite 1035
Chicago, IL 60654
T 312.755.0843
F 312.755.0837

Ft. Lauderdale
Las Olas City Centre
401 East Las Olas Blvd.,
Suite 230
Ft. Lauderdale, FL 33301
T 954.763.2684
F 954.763.6870

Philadelphia
1735 Market Street
38th Floor
Philadelphia
PA, 19103
(215) 861-0963

Phoenix
4675 East Cotton
Center Boulevard,
Suite 165
Phoenix, AZ 85040
T 602.426.0666
F 602.426.1148

Washington, DC
1130 Connecticut
Avenue
Washington, DC 20036
T 202.659.0230
F 202.659.0306

Boston
One Harbor Street,
Suite 104
Boston, MA 02210
T 617.406.5435
F 617.406.5438

Detroit Area
25925 Telegraph Road
Suite 145
Southfield, MI 48034
T 248.357.7211
F 248.357.7241

New York City
386 Park Avenue South,
7th floor
New York, NY 10016
T 212.545.9900
F 212.545.5826

New Jersey (Southern)
119 Greentree Road
Marlton, NJ 08053
T 856.596.3390
F 856.596.4472

St. Louis
5 Document Drive
St. Louis, MO 63114
T 314.432.4463
F 314.432.4471

SHOWROOMS + DISTRIBUTION CENTERS

Atlanta Area
2124 Evergreen Blvd.
Duluth, GA 30096
T 678.602.4130
F 678.602.4136

Chicago Area
1879 Internationale Blvd.
Glendale Heights, IL
60139
T 630.681.2818
F 630.681.1631

Denver Area
16401 E. 33rd Dr., Ste. 50
Aurora, CO 80011
T 303.340.1617
F 303.340.1657

Los Angeles Area
12320 Bloomfield
Avenue, Unit A
Santa Fe Springs, CA
90670
T 562.484.9686
F 562.484.9685

San Francisco Area
44091 Nobel Drive
Fremont, CA 94538
T 510.897.4150
F 510.897.4156

Kansas Area
11617 West 81st Street
Lenexa, KS 66214
T 913.310.9963
F 913.310.9976

Baltimore Area
Troy Hill Corporate
Center
7030 Troy Hill Drive
Elkridge, MD 21075
T 410.379.8021
F 301.362.9444

Cincinnati Area
8712 LeSaint Drive
Fairfield, OH 45014
T 513.777.0009
F 513.777.5863

Ft. Lauderdale Area
560 Sawgrass
Corporate Parkway
Sunrise, FL 33325
T 954.846.8888
F 954.846.8110

Minneapolis Area
2000 Freeway
Boulevard
Brooklyn Center, MN
55430
T 763.560.8196
F 763.560.2098

Seattle Area
Oakesdale Commerce
Center
820 Southwest 34th St.
Building W7, Suite A
Renton, WA 98057
T 425.291.9282
F 425.291.9287

Tampa Area
10351 Windhorst Road
Tampa, FL 33619
T 813.621.6272
F 813.621.7958

Boston Area
19 Connector Rd., Unit 1
Andover, MA 01810
T 978.470.8463
F 978.470.8920

Dallas Area
2025 W. Beltline Rd.,
#100
Carrollton, TX 75006
T 972.236.1366
F 972.236.1372

Houston
7865 Northcourt Road,
Building D, Suite 200
Houston, TX 77040
T 713.695.5777
F 713.695.5778

New Orleans Area
901 South Labarre
Road, Suite 201
Metairie, LA 70001
T 504.834.6228
F 504.835.9638

Global - USA Headquarters

17 West Stow Road P.O. Box 562
Marlton, New Jersey U.S.A. 08053
Tel (856) 596-3390 (800) 220-1900
Fax (856) 596-5684
www.globalfurnituregroup.com

Global - Canada Headquarters

1350 Flint Road
Downsview, ON Canada M3J 2J7
Sales & Marketing: Tel (1-877) 446-2251
Customer Service: Fax (800) 361-3182
Government Customer Service: Fax (416) 739-6319

